

# AUTO PRIME SHELLHOLDERS - LEE AUTO PRIME SHELLHOLDER #13

[Reloading](#) > [Shellholders & Shellplates](#)

Lee Universal Shell Holders function in the Lee handheld priming tools. Machined to close tolerances for maximum accuracy. Manufactured from hardened steel. View Lee Shellholder Chart



## Attributes

- Name: [LEE AUTO PRIME SHELLHOLDER #13](#)
- Manufacturer: [LEE PRECISION](#)
- Product no.: 749000364
- Mfr. No.: 90213
- Cartridge: 45 Auto Rim
- Style: Priming Tool
- Delivery weight: 0.014kg
- Shipping height: 5mm
- Shipping width: 97mm
- Shipping length: 127mm
- UPC: 734307902131

## Item details

Made in USA

# Table of Contents

- Startpage
- AUTO PRIME SHELLHOLDERS LEE AUTO PRIME SHELLHOLDER #13 Safety Instruction Guide
- About Us

# AUTO PRIME SHELLHOLDERS LEE AUTO PRIME SHELLHOLDER #13 Safety Instruction Guide

## Introduction

Thank you for choosing the AUTO PRIME SHELLHOLDERS LEE AUTO PRIME SHELLHOLDER #13. This product is designed to enhance your reloading experience with maximum accuracy and safety. Please read this safety instruction guide carefully to ensure proper use and compliance with safety regulations.

## General Safety Guidelines

- Always handle reloading tools and components with care and respect.
- Ensure that you are familiar with the specific cartridge and priming tool you are using.
- Store all reloading components out of reach of children and vulnerable individuals.
- Regularly inspect your tools for any signs of wear or damage before use.
- Follow all local laws and regulations regarding ammunition reloading.

## Specific Safety Precautions for Use

- Use the AUTO PRIME SHELLHOLDER #13 only with the compatible Lee handheld priming tools.
- Ensure the shellholder is securely attached to the priming tool before use.
- Avoid using excessive force during operation to prevent damage to the shellholder or the priming tool.
- Wear appropriate eye protection while reloading to guard against potential hazards.
- Do not attempt to modify or alter the shellholder in any way.

## Instructions for Installation and Usage

### 1. Installation:

- Ensure that your Lee handheld priming tool is clean and free of debris.
- Align the AUTO PRIME SHELLHOLDER #13 with the tool's mounting point.
- Push the shellholder firmly into place until it clicks or locks securely.

### 2. Usage:

- Load the appropriate cartridge (45 Auto Rim) into the shellholder.
- Follow the instructions provided with your Lee handheld priming tool for priming.
- After use, remove the shellholder from the tool by pressing the release mechanism.

## Disposal Instructions

- Dispose of the AUTO PRIME SHELLHOLDER #13 responsibly.
- Do not dispose of it in regular household waste.
- Check local regulations for proper disposal methods for metal products.
- Consider recycling the shellholder if possible.

## Contact Information for Further Support

For any safety inquiries or concerns regarding the AUTO PRIME SHELLHOLDER #13, please reach out to your local distributor or retailer for assistance. They are equipped to provide you with the necessary support and information.

By following these safety instructions, you can ensure a safe and efficient reloading experience with the AUTO

PRIME SHELLHOLDER LEE AUTO PRIME SHELLHOLDER #13. Thank you for prioritizing safety in your reloading practices.

# About Us

## Brownells Austria

**Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories**

[www.brownells.at](http://www.brownells.at)