

FLIP-OPEN OBJECTIVE LENS COVERS - BUTLER CREEK OBJECTIVE LENS COVER #3 1.34" (34.0MM)

[Optics & Mounting](#) > [Optic Accessories](#) > [Scope Lens Covers](#)

Keeps Harmful Debris From Scratching Or Abusing Lenses

Weatherproof, dust-proof, moisture-proof scope covers protect your scope's lenses from being damaged during tactical and hunting situations. Cover flips open easily with finger pressure to spring up, and out of the way. Eye and Objective covers sold separately. To determine the correct scope cover, measure the diameter of your scope eyepiece or objective and use the chart.



Attributes

- Name: [BUTLER CREEK OBJECTIVE LENS COVER #3 1.34" \(34.0MM\)](#)
- Manufacturer: [BUTLER CREEK](#)
- Product no.: 749001471
- Mfr. No.: 30035
- Colour: Black
- End Fit: Objective
- Model Number: 1.34" (34.0MM)
- Size: 1.340
- Delivery weight: 0.023kg
- Shipping height: 41mm
- Shipping width: 71mm
- Shipping length: 122mm
- UPC: 051525300359

Table of Contents

- [Startpage](#)
- [FLIPOPEN OBJECTIVE LENS COVERS SAFETY INSTRUCTION GUIDE](#)
- [About Us](#)

FLIPOPEN OBJECTIVE LENS COVERS SAFETY INSTRUCTION GUIDE

Introduction

Thank you for choosing the FLIPOPEN OBJECTIVE LENS COVERS by Butler Creek. These covers are designed to protect your scope's lenses from damage during tactical and hunting situations. This safety instruction guide is intended to ensure the safe use of the product in compliance with the EU General Product Safety Regulation (GPSR).

General Safety Guidelines

- Ensure that the lens covers are compatible with your scope by measuring the diameter of your eyepiece or objective.
- Always inspect the lens covers for damage before use. Do not use if damaged.
- Keep lens covers out of reach of children to prevent accidental choking or injury.
- Report any unsafe conditions or incidents related to the product to the appropriate authorities.
- Stay informed about product recalls by checking the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Do not force the cover open or closed. Use gentle finger pressure as intended.
- Avoid exposing the lens covers to extreme temperatures or harsh chemicals, as this may cause damage.
- Ensure that the lens covers are securely attached to the scope before use to prevent accidental detachment.
- Do not use the lens covers in a way that obstructs your view or impairs the functionality of the scope.

Instructions for Installation and Usage

1. Measuring Your Scope:

- Measure the diameter of your scope's eyepiece or objective to determine the appropriate size cover needed.
- Refer to the provided sizing chart to select the correct lens cover.

2. Installing the Lens Covers:

- Align the lens cover with the eyepiece or objective of your scope.
- Press the cover firmly onto the scope until it fits securely.

3. Using the Lens Covers:

- To open the cover, apply gentle finger pressure to flip it open.
- Ensure the cover springs up and out of the way without obstruction.
- When finished using the scope, close the cover to protect the lens.

4. Regular Maintenance:

- Clean the lens covers regularly with a soft, dry cloth to remove dust and debris.
- Inspect the covers periodically for signs of wear or damage.

Disposal Instructions

- Dispose of the lens covers responsibly. Check local regulations for proper disposal methods.
- Do not dispose of the lens covers in household waste if they are damaged or no longer usable; instead, follow local hazardous waste guidelines.

Contact Information for Further Support

For any inquiries regarding safety or product issues, please refer to the contact information provided on the packaging or the manufacturer's website.

By following these guidelines, you can ensure the safe and effective use of your FLIPOPEN OBJECTIVE LENS COVERS. Thank you for your attention to safety.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk