

DECAP ROD ASSEMBLIES - REDDING DECAP ROD ASSEMBLY

[Reloading](#) > [Reloading Dies](#) > [Replacement Parts & Upgrades](#)

Includes decapping pin and expander ball Replacement decap rod assembly for Redding sizing dies.



Attributes

- Name: [REDDING DECAP ROD ASSEMBLY](#)
- Manufacturer: [REDDING](#)
- Product no.: 749002300
- Mfr. No.: 24347
- Cartridge: 348 Winchester
- Diameter (in): -
- Delivery weight: 0.054kg
- Shipping height: 1mm
- Shipping width: 89mm
- Shipping length: 152mm

Item details

Made in USA

Table of Contents

- Startpage
- DECAP ROD ASSEMBLIES REDDING DECAP ROD ASSEMBLY Safety Instructions
- About Us

DECAP ROD ASSEMBLIES REDDING DECAP ROD ASSEMBLY Safety Instructions

Introduction

Thank you for purchasing the DECAP ROD ASSEMBLIES REDDING DECAP ROD ASSEMBLY. This product is designed to provide a reliable replacement decap rod assembly for Redding sizing dies. It includes a decapping pin and an expander ball. Please read this safety instruction guide carefully to ensure safe and effective use of the product.

General Safety Guidelines

- Ensure that you are familiar with the operation of your Redding sizing dies and the specific use of the decap rod assembly.
- Always handle tools and equipment with care to avoid injury.
- Keep the product out of reach of children and vulnerable individuals.
- Inspect the product for any damage or wear before use. Do not use if damaged.
- Follow all relevant local regulations regarding the use and disposal of this product.

Specific Safety Precautions for Use

- Always wear appropriate personal protective equipment (PPE) such as safety glasses and gloves when using the decap rod assembly.
- Avoid contact with moving parts during operation to prevent injury.
- Do not exceed the recommended specifications for the Redding sizing dies.
- Use the product only for its intended purpose. Misuse may result in injury or damage.
- If you experience any problems during use, stop immediately and consult the manufacturer for assistance.

Instructions for Installation and Usage

1. Installation of the Decap Rod Assembly:

- Ensure that your Redding sizing die is clean and free from debris.
- Remove the existing decap rod assembly from the sizing die.
- Insert the new DECAP ROD ASSEMBLY into the sizing die, ensuring it is securely placed.
- Make sure the decapping pin and expander ball are properly aligned.
- Tighten any necessary screws or fasteners to secure the assembly in place.

2. Usage Instructions:

- Set up your reloading station according to the manufacturer's guidelines.
- Ensure that all components are properly assembled and functioning.
- Begin the reloading process, carefully following the steps outlined in your Redding sizing die manual.
- Monitor the operation closely to ensure that the decap rod assembly is functioning correctly.
- After use, clean the assembly and store it in a safe place.

Disposal Instructions

- Dispose of any damaged or worn components in accordance with local regulations.
- Do not dispose of the product in household waste. Instead, follow local guidelines for the disposal of metal and plastic components.

- If unsure about disposal methods, contact your local waste management authority for guidance.

Contact Information for Further Support

For safety inquiries and support regarding the DECAP ROD ASSEMBLIES REDDING DECAP ROD ASSEMBLY, please refer to the contact information provided with your product packaging or on the manufacturer's website. Ensure you have the product details ready when seeking assistance.

Conclusion

By following these safety instructions, you can ensure a safe and effective experience with your DECAP ROD ASSEMBLIES REDDING DECAP ROD ASSEMBLY. Always prioritize safety and compliance with local regulations to enhance your reloading process. Thank you for choosing our product.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk