

SISSY BAG - PROTEKTOR SISSY BAG

[Shooting Accessories](#) > [Shooting Rests](#) > [Bench Rest Bags](#)

You want to shoot a 416 Rem Mag off the bench. Okay, keep reading. This bag certainly absorbs plenty of recoil when placed behind the buttplate. It's four inches in diameter by eight and a half inches high. A carrying strap is attached to the top. Note: Sand is required to fill this bag.



Attributes

- Name: [PROTEKTOR SISSY BAG](#)
- Manufacturer: [PROTEKTOR](#)
- Product no.: 749003235
- Mfr. No.: 15
- Colour: Tan
- Material: Leather
- Style: Sissy
- Delivery weight: 0.159kg
- Shipping height: 81mm
- Shipping width: 130mm
- Shipping length: 213mm

Item details

Made in USA

Table of Contents

- Startpage
- SISSY BAG PROTEKTOR SISSY BAG Safety Instruction Guide
- About Us

SISSY BAG PROTEKTOR SISSY BAG Safety Instruction Guide

Introduction

Thank you for choosing the SISSY BAG PROTEKTOR SISSY BAG. This product is designed to provide stability and absorb recoil when shooting. Please read this safety instruction guide carefully to ensure safe usage, proper installation, and maintenance of your bag.

General Safety Guidelines

- Ensure that the SISSY BAG is used only for its intended purpose, which is to support firearms during shooting activities.
- Always handle firearms and shooting accessories with care, following all safety protocols.
- Keep the bag out of reach of children and pets when not in use.
- Inspect the bag regularly for any signs of wear or damage before each use.
- Follow all local laws and regulations regarding firearm use and safety.

Specific Safety Precautions for Use

- Always fill the bag with sand as instructed; using other materials may compromise its stability and safety.
- Ensure the bag is placed securely behind the buttplate of the firearm before shooting.
- Do not exceed the weight limit of the bag when filled to avoid accidents.
- Avoid using the bag in wet or damp conditions to prevent damage to the material.
- Always wear appropriate safety gear, including eye and ear protection, when shooting.

Instructions for Installation and Usage

1. Filling the Bag:

- Open the filling port of the bag.
- Fill the bag with clean, dry sand until it reaches the desired weight.
- Close the filling port securely to prevent sand leakage.

2. Using the Bag:

- Place the filled SISSY BAG behind the buttplate of your firearm.
- Ensure the bag is stable and secure before taking aim.
- Adjust the position of the bag as needed for comfort and stability during shooting.

3. PostUse Care:

- After use, remove the bag from the shooting area.
- Store the bag in a dry place to prevent moisture damage.
- Regularly check the bag for any signs of wear or tear.

Disposal Instructions

- When disposing of the SISSY BAG, ensure that it is done in accordance with local regulations for waste disposal.
- If the bag is damaged beyond repair, consider recycling the materials if possible.

Contact Information for Further Support

For any questions or concerns regarding the SISSY BAG PROTEKTOR SISSY BAG, please refer to the manufacturer's contact information provided on the packaging or product documentation.

Conclusion

Following these safety guidelines will help ensure a safe and enjoyable shooting experience with your SISSY BAG PROTEKTOR SISSY BAG. Always prioritize safety and responsible firearm handling. Thank you for your attention to these important instructions.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk