

RAIL MOUNT MONOPODS - ACCU-SHOT MID-RANGE PRM MONOPOD RAIL 4.75-5.5" QUICK KNOB

[Shooting Accessories](#) > [Bipods, Monopods & Accessories](#) > [Monopods](#)

The Accu-Shot Monopods are designed to add stability and provide easy elevation adjustment for bi-pod equipped rifles. The Precision Rail Monopod (PRM) from Accu-Shot attaches to a Picatinny rail and has several applications other than monopod use, such as a folding vertical fore grip. It easily folds up and retracts out of the way when not in use. We're offering the PRM with the factory upgraded "Quick Knob" for faster target acquisition. The "Quick Knob" enables the user to make quick adjustments with the push of a button.

Depressing the spring loaded button allows your monopod to slide up or down for gross adjustment so that you can find your desired sight picture. Release the button and re-engage the actuator rod threads and rotate the knob for fine adjustment. Available in Standard (3.75" - 4.65"), Mid-range (4.75" - 5.65") and Extended height (5.65" - 6.60") heights with Quick Knob.



Accu-Shot PRM Monopod w/Quick Knob Mid-Range 4.4-5.85"

Attributes

- Name: [ACCU-SHOT MID-RANGE PRM MONOPOD RAIL 4.75-5.5" QUICK KNOB](#)
- Manufacturer: [ACCU-SHOT](#)
- Product no.: 749007535
- Mfr. No.: BT13-QK
- Attachment: Rail
- Colour: Black
- Height: 4 3/4 to 5 1/2
- Style: Quick Knob
- Delivery weight: 0.249kg
- Shipping height: 33mm
- Shipping width: 122mm
- Shipping length: 193mm
- UPC: 810040220050

Item details

Made in USA

Table of Contents

- Startpage
- Safety Instruction Guide for AccuShot PRM Monopod with Quick Knob
- About Us

Safety Instruction Guide for AccuShot PRM Monopod with Quick Knob

Introduction

Thank you for choosing the AccuShot PRM Monopod with Quick Knob. This guide provides essential safety instructions and guidelines to ensure the safe use of your monopod. Please read this document carefully before using the product.

General Safety Guidelines

- Always inspect the monopod before use for any signs of damage or wear.
- Ensure that the monopod is used in accordance with the manufacturer's instructions.
- Keep the monopod out of reach of children and pets when not in use.
- Do not use the monopod in extreme weather conditions, such as high winds or heavy rain, as this may compromise stability and safety.
- If you notice any unusual noises or instability during use, stop using the monopod immediately and inspect it for issues.
- Follow all local laws and regulations regarding the use of monopods in public spaces.

Specific Safety Precautions for Use

- **Weight Limit:** Do not exceed the weight limit specified by the manufacturer for the monopod. Overloading can lead to instability and accidents.
- **Surface Stability:** Always set up the monopod on a stable and level surface. Avoid using it on uneven or slippery ground.
- **Secure Attachment:** Ensure that your camera or equipment is securely attached to the monopod before use. Check the attachment mechanism regularly.
- **Avoid Obstructions:** Be aware of your surroundings and avoid using the monopod near obstructions or in crowded areas.
- **Use with Care:** When adjusting the height or angle of the monopod, do so slowly and carefully to avoid sudden movements that may lead to accidents.

Instructions for Installation and Usage

1. Preparation:

- Remove the monopod from its packaging.
- Inspect all components for damage or defects.

2. Adjusting Height:

- Loosen the quick knob to adjust the height of the monopod.
- Set the desired height between 4.75 and 5.5 inches.
- Tighten the quick knob securely to lock the height in place.

3. Attaching Equipment:

- Ensure that your camera or equipment is compatible with the monopod.
- Align the attachment plate with the mounting point on your camera.
- Securely fasten the equipment to the monopod using the attachment mechanism.

4. Using the Monopod:

- Hold the monopod firmly while taking photos or recording.
- Keep one hand on the monopod and use the other hand to operate the camera.
- Avoid sudden movements that may cause the monopod to tip over.

5. Storage:

- After use, disassemble the monopod and store it in a safe place.
- Keep the monopod in a dry environment to prevent damage.

Disposal Instructions

- Dispose of the monopod in accordance with local regulations regarding electronic waste.
- If the monopod is damaged beyond repair, consider recycling the materials where possible.
- Do not dispose of the monopod in household waste.

Contact Information for Further Support

For any safety inquiries or concerns regarding the AccuShot PRM Monopod, please refer to the manufacturer's customer service resources. Ensure you have the product details ready for assistance.

By following these safety instructions, you can ensure a safe and enjoyable experience with your AccuShot PRM Monopod. Thank you for your attention to safety!

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk