

MICRO-ADJUST BULLET SEATERS - SINCLAIR INTERNATIONAL MICRO-ADJUST BULLET SEATING DIE 308 WINCHESTER

[Reloading](#) > [Reloading Dies](#) > [Rifle Dies](#)

We gathered our customers ideas and reloading experience with hand dies, and partnered with the experts who make them, to introduce the new Sinclair/L.E. Wilson Micro-Adjust Bullet Seater. It features easy-adjust seating depth capabilities with a simple turn of the die body. Sinclair/L.E. Wilson Micro-Adjust Bullet Seaters are detent-bearing driven with positive "click" increments of .0005" for fast, accurate bullet seating depth adjustments. Here are the details of construction: Each seater stem is custom fitted to the seater body ensuring close tolerance fit Precision-cut threads allow bullet seating depth adjustment in .0005" increments Graduated scale for repeated use with different bullets and seating depths Micro-Adjust "clicks" via stainless springs and stainless ball bearings Constructed of 416 Stainless Steel with precise, laser-etched adjustment scale Made in the USA by L.E. Wilson with 85 years of inline die experience We feel these dies are the finest available in terms of quality, construction, and performance.



We gathered our customers ideas and reloading experience with hand dies, and partnered with the experts who make them, to introduce the new Sinclair/L.E. Wilson Micro-Adjust Bullet Seater. It features easy-adjust seating depth capabilities with a simple turn of the die body. Sinclair/L.E. Wilson Micro-Adjust Bullet Seaters are detent-bearing driven with positive "click" increments of .0005" for fast, accurate bullet seating depth adjustments. Here are the details of construction: Each seater stem is custom fitted to the seater body ensuring close tolerance fit Precision-cut threads allow bullet seating depth adjustment in .0005" increments Graduated scale for repeated use with different bullets and seating depths Micro-Adjust "clicks" via stainless springs and stainless ball bearings Constructed of 416 Stainless Steel with precise, laser-etched adjustment scale Made in the USA by L.E. Wilson with 85 years of inline die experience We feel these dies are the finest available in terms of quality, construction, and performance. Available in 12 popular cartridge offerings.

Attributes

- Name: [SINCLAIR INTERNATIONAL MICRO-ADJUST BULLET SEATING DIE 308 WINCHESTER](#)
- Manufacturer: [SINCLAIR INTERNATIONAL](#)
- Product no.: 749014500
- Mfr. No.: SIN-308W
- Cartridge: 308 Winchester
- Die Style: Bullet Seating Dies
- Delivery weight: 0.487kg
- Shipping height: 44mm
- Shipping width: 51mm
- Shipping length: 152mm

Item details

Made in USA

Table of Contents

- Startpage
- Safety Instruction Guide for MICROADJUST BULLET SEATERS
- About Us

Safety Instruction Guide for MICROADJUST BULLET SEATERS

Introduction

Thank you for choosing the MICROADJUST BULLET SEATERS from Sinclair International. This guide provides essential safety information to ensure the safe use of this product. Please read this guide carefully before using the product.

General Safety Guidelines

- Ensure safe use of the MICROADJUST BULLET SEATER by following all instructions provided.
- Be aware of potential hazards associated with reloading equipment and take necessary precautions.
- Always keep the product out of reach of children and vulnerable individuals.
- Regularly check for updates on product safety and recalls through the EU's Safety Gate platform.
- Report any unsafe products or accidents to the relevant authorities.

Specific Safety Precautions for Use

- Before use, inspect the bullet seater for any damage or defects. Do not use if damaged.
- Always wear appropriate safety gear, including safety glasses and gloves, when handling reloading equipment.
- Use the bullet seater only for its intended purpose—seating bullets in the reloading process.
- Avoid excessive force when adjusting the seating depth to prevent damage to the seater or injury.
- Keep hands and fingers clear of moving parts during operation to avoid pinching or injury.
- Ensure that the workspace is clean and free of obstructions to prevent accidents.

Instructions for Installation and Usage

1. Installation:

- Secure the bullet seater in a stable reloading press according to the manufacturer's instructions.
- Ensure that the die is properly aligned and tightened to prevent movement during use.

2. Using the Bullet Seater:

- Adjust the seating depth by turning the die body. The microadjust feature allows for precise adjustments in increments of .0005 inches.
- Use the graduated scale for repeated use with different bullets and seating depths.
- After adjustments, test the seating depth with a dummy round before proceeding with live ammunition.
- Always follow recommended reloading practices and guidelines.

3. Maintenance:

- Regularly clean the bullet seater to prevent buildup of debris and ensure smooth operation.
- Inspect the seater for wear and tear, and replace any worn components as necessary.

Disposal Instructions

- Dispose of the MICROADJUST BULLET SEATER and any associated materials in accordance with local regulations.
- Do not dispose of the product in regular household waste. Check for designated disposal sites for metal

and reloading equipment.

Contact Information for Further Support

For any questions or concerns regarding the MICROADJUST BULLET SEATER, please refer to the manufacturer's website or contact their customer service for assistance.

By adhering to the guidelines and precautions outlined in this document, you can ensure a safe and effective reloading experience with the MICROADJUST BULLET SEATERS from Sinclair International. Thank you for your attention to safety.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk