

MICRO-ADJUST BULLET SEATERS - SINCLAIR INTERNATIONAL MICRO-ADJUST BULLET SEATING DIE 6MM BR NORMA

[Reloading](#) > [Reloading Dies](#) > [Rifle Dies](#)

We gathered our customers ideas and reloading experience with hand dies, and partnered with the experts who make them, to introduce the new Sinclair/L.E. Wilson Micro-Adjust Bullet Seater. It features easy-adjust seating depth capabilities with a simple turn of the die body. Sinclair/L.E. Wilson Micro-Adjust Bullet Seaters are detent-bearing driven with positive "click" increments of .0005" for fast, accurate bullet seating depth adjustments. Here are the details of construction: Each seater stem is custom fitted to the seater body ensuring close tolerance fit Precision-cut threads allow bullet seating depth adjustment in .0005" increments Graduated scale for repeated use with different bullets and seating depths Micro-Adjust "clicks" via stainless springs and stainless ball bearings Constructed of 416 Stainless Steel with precise, laser-etched adjustment scale Made in the USA by L.E. Wilson with 85 years of inline die experience We feel these dies are the finest available in terms of quality, construction, and performance.



We gathered our customers ideas and reloading experience with hand dies, and partnered with the experts who make them, to introduce the new Sinclair/L.E. Wilson Micro-Adjust Bullet Seater. It features easy-adjust seating depth capabilities with a simple turn of the die body. Sinclair/L.E. Wilson Micro-Adjust Bullet Seaters are detent-bearing driven with positive "click" increments of .0005" for fast, accurate bullet seating depth adjustments. Here are the details of construction: Each seater stem is custom fitted to the seater body ensuring close tolerance fit Precision-cut threads allow bullet seating depth adjustment in .0005" increments Graduated scale for repeated use with different bullets and seating depths Micro-Adjust "clicks" via stainless springs and stainless ball bearings Constructed of 416 Stainless Steel with precise, laser-etched adjustment scale Made in the USA by L.E. Wilson with 85 years of inline die experience We feel these dies are the finest available in terms of quality, construction, and performance. Available in 12 popular cartridge offerings.

Attributes

- Name: [SINCLAIR INTERNATIONAL MICRO-ADJUST BULLET SEATING DIE 6MM BR NORMA](#)
- Manufacturer: [SINCLAIR INTERNATIONAL](#)
- Product no.: 749014502
- Mfr. No.: SIN-6BR
- Cartridge: 6 mm BR Norma
- Die Style: Bullet Seating Dies
- Delivery weight: 0.363kg
- Shipping height: 41mm
- Shipping width: 43mm
- Shipping length: 147mm

Item details

Made in USA

Table of Contents

- Startpage
- Safety Instruction Guide for MICROADJUST BULLET SEATERS
- About Us

Safety Instruction Guide for MICROADJUST BULLET SEATERS

Introduction

Thank you for choosing the MICROADJUST BULLET SEATERS from Sinclair International. This guide provides essential safety instructions to ensure the proper and safe use of this product. Please read and follow these guidelines carefully to maximize your safety and the performance of the bullet seating die.

General Safety Guidelines

- Ensure that the product is used in accordance with the manufacturer's instructions.
- Always wear appropriate safety gear, including eye protection, when using reloading equipment.
- Keep the product out of reach of children and unauthorized users.
- Regularly inspect the product for any signs of damage or wear. Do not use if damaged.
- Report any unsafe products or accidents to the relevant authorities.
- Stay informed about recalls and safety updates through the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Avoid using the bullet seating die with incompatible cartridges.
- Ensure that the die is securely mounted to the reloading press before use.
- Use only recommended bullet types for optimal performance and safety.
- Do not exceed the manufacturer's specified seating depth adjustments.
- Keep your workspace clean and organized to prevent accidents.
- Never attempt to modify the die or its components.

Instructions for Installation and Usage

1. Installation

- Ensure that your reloading press is clean and free of debris.
- Securely mount the MICROADJUST BULLET SEATER to your reloading press following these steps:
 - Unscrew the lock ring on the die.
 - Insert the die into the press and tighten the lock ring securely.
 - Adjust the die to the desired seating depth using the microadjust feature.

2. Usage

- Prepare your cartridge cases and bullets according to your reloading procedure.
- Insert a cartridge case into the press.
- Place a bullet on top of the cartridge case.
- Slowly lower the ram to seat the bullet. Use the microadjust feature to finetune the depth as needed.
- After each adjustment, make sure to check the seating depth with a caliper for accuracy.
- Repeat the process for each cartridge, ensuring consistent results.
- After use, clean the die and store it in a safe place.

Disposal Instructions

- Dispose of the product in accordance with local regulations.
- Do not dispose of the die in regular household waste.
- Consider recycling components where possible.

Contact Information for Further Support

For any inquiries regarding safety or product performance, please refer to the manufacturer's contact information provided with the product or on their official website.

By following these safety instructions, you can ensure a safe and effective reloading experience with the MICROADJUST BULLET SEATERS from Sinclair International. Always prioritize safety and stay informed about best practices in reloading. Thank you for your attention to these important safety guidelines.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk