

MICRO-ADJUST BULLET SEATERS - SINCLAIR INTERNATIONAL MICRO-ADJUST BULLET SEATING DIE 6MM DASHER

[Reloading](#) > [Reloading Dies](#) > [Rifle Dies](#)

We gathered our customers ideas and reloading experience with hand dies, and partnered with the experts who make them, to introduce the new Sinclair/L.E. Wilson Micro-Adjust Bullet Seater. It features easy-adjust seating depth capabilities with a simple turn of the die body. Sinclair/L.E. Wilson Micro-Adjust Bullet Seaters are detent-bearing driven with positive "click" increments of .0005" for fast, accurate bullet seating depth adjustments. Here are the details of construction: Each seater stem is custom fitted to the seater body ensuring close tolerance fit Precision-cut threads allow bullet seating depth adjustment in .0005" increments Graduated scale for repeated use with different bullets and seating depths Micro-Adjust "clicks" via stainless springs and stainless ball bearings Constructed of 416 Stainless Steel with precise, laser-etched adjustment scale Made in the USA by L.E. Wilson with 85 years of inline die experience We feel these dies are the finest available in terms of quality, construction, and performance.



We gathered our customers ideas and reloading experience with hand dies, and partnered with the experts who make them, to introduce the new Sinclair/L.E. Wilson Micro-Adjust Bullet Seater. It features easy-adjust seating depth capabilities with a simple turn of the die body. Sinclair/L.E. Wilson Micro-Adjust Bullet Seaters are detent-bearing driven with positive "click" increments of .0005" for fast, accurate bullet seating depth adjustments. Here are the details of construction: Each seater stem is custom fitted to the seater body ensuring close tolerance fit Precision-cut threads allow bullet seating depth adjustment in .0005" increments Graduated scale for repeated use with different bullets and seating depths Micro-Adjust "clicks" via stainless springs and stainless ball bearings Constructed of 416 Stainless Steel with precise, laser-etched adjustment scale Made in the USA by L.E. Wilson with 85 years of inline die experience We feel these dies are the finest available in terms of quality, construction, and performance. Available in 12 popular cartridge offerings.

Attributes

- Name: [SINCLAIR INTERNATIONAL MICRO-ADJUST BULLET SEATING DIE 6MM DASHER](#)
- Manufacturer: [SINCLAIR INTERNATIONAL](#)
- Product no.: 749014503
- Mfr. No.: SIN-6DASH
- Cartridge: 6 mm Dasher
- Die Style: Bullet Seating Dies
- Delivery weight: 0.436kg
- Shipping height: 38mm
- Shipping width: 38mm
- Shipping length: 152mm

Item details

Made in USA

Table of Contents

- Startpage
- Safety Instruction Guide for MICROADJUST BULLET SEATERS SINCLAIR INTERNATIONAL 6MM DASHER BULLET SEATING DIE
- About Us

Safety Instruction Guide for MICROADJUST BULLET SEATERS SINCLAIR INTERNATIONAL 6MM DASHER BULLET SEATING DIE

Introduction

Thank you for choosing the Sinclair/L.E. Wilson MicroAdjust Bullet Seater. This product is designed for precision bullet seating in reloading applications. To ensure your safety and the optimal performance of this product, please read and follow the safety instructions outlined in this guide.

General Safety Guidelines

- Always use the product in accordance with the manufacturer's instructions.
- Keep the product out of reach of children and vulnerable individuals.
- Inspect the product regularly for any signs of wear or damage before use.
- Avoid using the product in wet or damp conditions.
- Report any unsafe conditions or accidents involving the product to the appropriate authorities.
- Stay updated on safety information and recall notices via the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Ensure that you are familiar with the reloading process and the specific requirements for using bullet seating dies.
- Wear appropriate safety gear, such as safety glasses and gloves, when handling reloading components.
- Use the die only for its intended purpose; do not modify or alter the product.
- Maintain a clean and organized workspace to avoid accidents.
- Always follow the recommended bullet seating depth adjustments to prevent overseating, which may lead to dangerous pressure levels.

Instructions for Installation and Usage

1. Installation:

- Ensure that your reloading press is compatible with the Sinclair/L.E. Wilson MicroAdjust Bullet Seater.
- Securely mount the die in the reloading press according to the press manufacturer's instructions.
- Confirm that the die is properly aligned before proceeding with bullet seating.

2. Usage:

- Adjust the seating depth by turning the die body clockwise or counterclockwise as needed. Each "click" represents a .0005" adjustment.
- Use the graduated scale for reference when changing bullet types or seating depths.
- After adjusting, perform a test seating with a dummy round to confirm the desired depth before loading live ammunition.
- Store the die in a clean, dry location when not in use to maintain its condition.

Disposal Instructions

- Dispose of any damaged or unusable parts of the product responsibly, following local regulations for metal and hazardous waste.
- Do not throw the product in regular household waste. Check with local waste management facilities for

proper disposal methods.

Contact Information for Further Support

For any questions or concerns regarding the Sinclair/L.E. Wilson MicroAdjust Bullet Seater, please refer to the manufacturer's website or customer service resources for assistance.

By adhering to these safety guidelines and instructions, you can ensure a safe and effective reloading experience with your new bullet seating die. Thank you for prioritizing safety while enjoying your reloading hobby.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk