

MICRO-ADJUST BULLET SEATERS - SINCLAIR INTERNATIONAL MICRO-ADJUST BULLET SEATING DIE 6.5X47MM LAPUA

[Reloading](#) > [Reloading Dies](#) > [Rifle Dies](#)

We gathered our customers ideas and reloading experience with hand dies, and partnered with the experts who make them, to introduce the new Sinclair/L.E. Wilson Micro-Adjust Bullet Seater. It features easy-adjust seating depth capabilities with a simple turn of the die body. Sinclair/L.E. Wilson Micro-Adjust Bullet Seaters are detent-bearing driven with positive "click" increments of .0005" for fast, accurate bullet seating depth adjustments. Here are the details of construction: Each seater stem is custom fitted to the seater body ensuring close tolerance fit Precision-cut threads allow bullet seating depth adjustment in .0005" increments Graduated scale for repeated use with different bullets and seating depths Micro-Adjust "clicks" via stainless springs and stainless ball bearings Constructed of 416 Stainless Steel with precise, laser-etched adjustment scale Made in the USA by L.E. Wilson with 85 years of inline die experience We feel these dies are the finest available in terms of quality, construction, and performance.



We gathered our customers ideas and reloading experience with hand dies, and partnered with the experts who make them, to introduce the new Sinclair/L.E. Wilson Micro-Adjust Bullet Seater. It features easy-adjust seating depth capabilities with a simple turn of the die body. Sinclair/L.E. Wilson Micro-Adjust Bullet Seaters are detent-bearing driven with positive "click" increments of .0005" for fast, accurate bullet seating depth adjustments. Here are the details of construction: Each seater stem is custom fitted to the seater body ensuring close tolerance fit Precision-cut threads allow bullet seating depth adjustment in .0005" increments Graduated scale for repeated use with different bullets and seating depths Micro-Adjust "clicks" via stainless springs and stainless ball bearings Constructed of 416 Stainless Steel with precise, laser-etched adjustment scale Made in the USA by L.E. Wilson with 85 years of inline die experience We feel these dies are the finest available in terms of quality, construction, and performance. Available in 12 popular cartridge offerings.

Attributes

- Name: [SINCLAIR INTERNATIONAL MICRO-ADJUST BULLET SEATING DIE 6.5X47MM LAPUA](#)
- Manufacturer: [SINCLAIR INTERNATIONAL](#)
- Product no.: 749014504
- Mfr. No.: SIN-65LAP
- Cartridge: 6.5 x 47 mm Lapua
- Die Style: Bullet Seating Dies
- Delivery weight: 0.204kg
- Shipping height: 41mm
- Shipping width: 46mm
- Shipping length: 150mm

Item details

Made in USA

Table of Contents

- Startpage
- Safety Instruction Guide for MICROADJUST BULLET SEATERS
- About Us

Safety Instruction Guide for MICROADJUST BULLET SEATERS

Introduction

Thank you for purchasing the Sinclair International MicroAdjust Bullet Seater for 6.5x47mm Lapua. This guide provides essential safety instructions and usage information to ensure safe operation and optimal performance of your product. Please read this guide carefully before use.

General Safety Guidelines

- **Product Safety:** Always ensure the product is used according to the guidelines provided. Misuse can lead to accidents and injuries.
- **Enhanced Recalls:** Stay informed about recalls. Check the EU Safety Gate platform regularly for updates on any safety notices related to this product.
- **Online Shopping:** When purchasing online, ensure you are buying from authorized and reputable retailers to guarantee product safety.
- **Special Consumer Focus:** This product is intended for adult use only. Keep out of reach of children.
- **EU Contact Point:** For safety inquiries, please refer to the contact point provided by the retailer.
- **Rapid Alerts:** Be aware of the Safety Gate system for quick alerts on unsafe products.

Specific Safety Precautions for Use

- **Read the Manual:** Always read and understand the user manual before using the bullet seater.
- **Inspect the Product:** Before each use, inspect the bullet seater for any signs of damage or wear. Do not use if damaged.
- **Use Appropriate Ammunition:** Only use the bullet seater with compatible ammunition. Refer to the specifications for the correct cartridge type.
- **Wear Protective Gear:** Always wear safety glasses and appropriate protective gear when reloading ammunition.
- **Work in a Safe Environment:** Ensure your workspace is welllit, organized, and free from distractions.
- **Keep the Area Clean:** Maintain a clean working area to avoid accidents or contamination of components.
- **Avoid Overtightening:** When adjusting the die, do not overtighten as this may damage the threads or lead to inaccurate adjustments.

Instructions for Installation and Usage

1. Installation:

- Ensure the reloading press is securely mounted to a stable surface.
- Remove any existing dies from the press.
- Insert the Sinclair MicroAdjust Bullet Seater into the press and tighten securely.
- Ensure the die is aligned correctly with the press.

2. Adjusting Seating Depth:

- Loosen the locking ring on the die body.
- Turn the die body to adjust the seating depth. Each “click” represents a .0005” adjustment.
- Use the graduated scale for reference and repeatability.
- Once the desired depth is achieved, tighten the locking ring securely.

3. Seating Bullets:

- Place a cartridge case into the shell holder of the press.
- Insert the bullet into the case mouth.
- Pull the handle of the press to seat the bullet.
- Check the seating depth after each adjustment to ensure accuracy.

4. After Use:

- Clean the die and surrounding area to prevent residue buildup.
- Store the bullet seater in a safe, dry location away from children.

Disposal Instructions

- Dispose of any used or damaged components in accordance with local regulations.
- Do not dispose of the product in regular household waste. Check for local recycling programs for metal and plastic components.
- If the product becomes unsafe or unusable, contact your local waste management authority for proper disposal methods.

Contact Information for Further Support

For any further assistance or inquiries regarding safety, usage, or maintenance of the MICROADJUST BULLET SEATER, please refer to the contact information provided by your retailer or manufacturer.

By following these safety instructions, you can ensure the safe and effective use of the Sinclair International MicroAdjust Bullet Seater. Thank you for choosing our product, and happy reloading!

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk