

MICRO-ADJUST BULLET SEATERS - SINCLAIR INTERNATIONAL MICRO-ADJUST BULLET SEATING DIE 6MM PPC

[Reloading](#) > [Reloading Dies](#) > [Rifle Dies](#)

We gathered our customers ideas and reloading experience with hand dies, and partnered with the experts who make them, to introduce the new Sinclair/L.E. Wilson Micro-Adjust Bullet Seater. It features easy-adjust seating depth capabilities with a simple turn of the die body. Sinclair/L.E. Wilson Micro-Adjust Bullet Seaters are detent-bearing driven with positive "click" increments of .0005" for fast, accurate bullet seating depth adjustments. Here are the details of construction: Each seater stem is custom fitted to the seater body ensuring close tolerance fit Precision-cut threads allow bullet seating depth adjustment in .0005" increments Graduated scale for repeated use with different bullets and seating depths Micro-Adjust "clicks" via stainless springs and stainless ball bearings Constructed of 416 Stainless Steel with precise, laser-etched adjustment scale Made in the USA by L.E. Wilson with 85 years of inline die experience We feel these dies are the finest available in terms of quality, construction, and performance.



We gathered our customers ideas and reloading experience with hand dies, and partnered with the experts who make them, to introduce the new Sinclair/L.E. Wilson Micro-Adjust Bullet Seater. It features easy-adjust seating depth capabilities with a simple turn of the die body. Sinclair/L.E. Wilson Micro-Adjust Bullet Seaters are detent-bearing driven with positive "click" increments of .0005" for fast, accurate bullet seating depth adjustments. Here are the details of construction: Each seater stem is custom fitted to the seater body ensuring close tolerance fit Precision-cut threads allow bullet seating depth adjustment in .0005" increments Graduated scale for repeated use with different bullets and seating depths Micro-Adjust "clicks" via stainless springs and stainless ball bearings Constructed of 416 Stainless Steel with precise, laser-etched adjustment scale Made in the USA by L.E. Wilson with 85 years of inline die experience We feel these dies are the finest available in terms of quality, construction, and performance. Available in 12 popular cartridge offerings.

Attributes

- Name: [SINCLAIR INTERNATIONAL MICRO-ADJUST BULLET SEATING DIE 6MM PPC](#)
- Manufacturer: [SINCLAIR INTERNATIONAL](#)
- Product no.: 749014505
- Mfr. No.: SIN-6PPC
- Cartridge: 6mm PPC
- Die Style: Bullet Seating Dies
- Delivery weight: 0.295kg
- Shipping height: 41mm
- Shipping width: 51mm
- Shipping length: 150mm

Item details

Made in USA

Table of Contents

- Startpage
- Safety Instruction Guide for MICROADJUST BULLET SEATERS
- About Us

Safety Instruction Guide for MICROADJUST BULLET SEATERS

Introduction

Thank you for choosing the Sinclair International MicroAdjust Bullet Seater for your reloading needs. This guide provides essential safety instructions and guidelines to ensure safe and effective use of the product. Please read this document carefully before using the die to avoid potential hazards and ensure optimal performance.

General Safety Guidelines

- Ensure that the product is used only for its intended purpose as specified in the product description.
- Always handle the die with care to avoid injury or damage.
- Keep the die and all reloading equipment out of reach of children and vulnerable individuals.
- Regularly inspect the die for any signs of wear or damage before use.
- Follow all local laws and regulations regarding the use and storage of reloading equipment.
- Report any unsafe conditions or accidents to the appropriate authorities.

Specific Safety Precautions for Use

- Always wear safety glasses when using the bullet seater to protect your eyes from potential debris.
- Use the die in a wellventilated area to avoid inhaling any dust or particles.
- Ensure that your work surface is clean and free from clutter to prevent accidents.
- Never exceed the recommended bullet seating depth adjustments to prevent malfunctions or accidents.
- Handle all components of the reloading process, including bullets and powder, with care and follow appropriate safety guidelines.
- Do not modify the die or its components in any way, as this could compromise safety and performance.

Instructions for Installation and Usage

1. Installation:

- Ensure that your reloading press is compatible with the Sinclair International MicroAdjust Bullet Seater.
- Securely attach the die to the reloading press according to the manufacturer's instructions.
- Confirm that the die is properly aligned and tightened to prevent movement during use.

2. Usage:

- Adjust the seating depth by turning the die body until the desired depth is reached. Use the graduated scale for reference.
- Ensure that the bullet is properly seated before proceeding with the next round.
- Regularly check the seating depth during the reloading process to ensure consistency.
- After use, clean the die according to the manufacturer's recommendations to maintain its functionality.

Disposal Instructions

- Dispose of any used or damaged components in accordance with local regulations.
- Do not dispose of the die or any parts in household waste.
- Consider recycling options for metal components where applicable.

Contact Information for Further Support

For any questions or concerns regarding the Sinclair International MicroAdjust Bullet Seater, please reach out to the appropriate support channels. Ensure that you have the product details and any relevant information available for a more efficient response.

By following these safety instructions, you can ensure a safe and effective reloading experience with the Sinclair International MicroAdjust Bullet Seater. Thank you for your commitment to safety and quality in your reloading practices.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk