

MICRO-ADJUST BULLET SEATERS - SINCLAIR INTERNATIONAL MICRO-ADJUST BULLET SEATING DIE 338 LAPUA

[Reloading](#) > [Reloading Dies](#) > [Rifle Dies](#)

We gathered our customers ideas and reloading experience with hand dies, and partnered with the experts who make them, to introduce the new Sinclair/L.E. Wilson Micro-Adjust Bullet Seater. It features easy-adjust seating depth capabilities with a simple turn of the die body. Sinclair/L.E. Wilson Micro-Adjust Bullet Seaters are detent-bearing driven with positive "click" increments of .0005" for fast, accurate bullet seating depth adjustments. Here are the details of construction: Each seater stem is custom fitted to the seater body ensuring close tolerance fit Precision-cut threads allow bullet seating depth adjustment in .0005" increments Graduated scale for repeated use with different bullets and seating depths Micro-Adjust "clicks" via stainless springs and stainless ball bearings Constructed of 416 Stainless Steel with precise, laser-etched adjustment scale Made in the USA by L.E. Wilson with 85 years of inline die experience We feel these dies are the finest available in terms of quality, construction, and performance.



We gathered our customers ideas and reloading experience with hand dies, and partnered with the experts who make them, to introduce the new Sinclair/L.E. Wilson Micro-Adjust Bullet Seater. It features easy-adjust seating depth capabilities with a simple turn of the die body. Sinclair/L.E. Wilson Micro-Adjust Bullet Seaters are detent-bearing driven with positive "click" increments of .0005" for fast, accurate bullet seating depth adjustments. Here are the details of construction: Each seater stem is custom fitted to the seater body ensuring close tolerance fit Precision-cut threads allow bullet seating depth adjustment in .0005" increments Graduated scale for repeated use with different bullets and seating depths Micro-Adjust "clicks" via stainless springs and stainless ball bearings Constructed of 416 Stainless Steel with precise, laser-etched adjustment scale Made in the USA by L.E. Wilson with 85 years of inline die experience We feel these dies are the finest available in terms of quality, construction, and performance. Available in 12 popular cartridge offerings.

Attributes

- Name: [SINCLAIR INTERNATIONAL MICRO-ADJUST BULLET SEATING DIE 338 LAPUA](#)
- Manufacturer: [SINCLAIR INTERNATIONAL](#)
- Product no.: 749014507
- Mfr. No.: SIN-338L
- Cartridge: 338 Lapua Mag
- Die Style: Bullet Seating Dies
- Delivery weight: 0.521kg
- Shipping height: 32mm
- Shipping width: 70mm
- Shipping length: 121mm

Item details

Made in USA

Table of Contents

- Startpage
- Safety Instruction Guide for MICROADJUST BULLET SEATERS
- About Us

Safety Instruction Guide for MICROADJUST BULLET SEATERS

Introduction

Thank you for choosing the MICROADJUST BULLET SEATERS by Sinclair International. This guide provides essential safety information and instructions for the proper use of this product. Please read this document carefully to ensure safe operation and compliance with the EU General Product Safety Regulation (GPSR).

General Safety Guidelines

- Ensure the product is used only for its intended purpose.
- Keep the product out of reach of children and vulnerable individuals.
- Regularly inspect the product for any signs of wear or damage before use.
- Always follow the manufacturer's instructions for use and maintenance.
- In case of any malfunction or damage, cease use immediately and consult a professional.
- Report any unsafe products or incidents to the relevant authorities.

Specific Safety Precautions for Use

• Hazard Identification:

- Risk of injury from improper handling of the die.
- Risk of inaccuracies in bullet seating depth leading to potential firearm malfunctions.

• Avoiding Hazards:

- Always ensure the die is securely fastened before use.
- Use appropriate personal protective equipment (PPE) such as safety glasses and gloves.
- Do not exceed the recommended adjustments of .0005" increments.
- Ensure that the work area is clean and free from distractions.

• Age Specific Warnings:

- This product is not intended for use by individuals under the age of 18 without adult supervision.

Instructions for Installation and Usage

1. Installation:

- Ensure the reloading press is securely mounted and stable.
- Insert the MICROADJUST BULLET SEATER into the reloading press according to the manufacturer's instructions.
- Tighten the lock ring to secure the die in place.

2. Usage:

- Adjust the seating depth by turning the die body to achieve the desired measurement.
- Use the graduated scale for repeated use with different bullets and seating depths.
- Make adjustments in .0005" increments, listening for the positive "click" to ensure accuracy.
- After adjustments, test the seating depth with a dummy round before proceeding with live ammunition.

3. Maintenance:

- Clean the die regularly to prevent residue buildup.
- Store the product in a dry, cool place when not in use.

Disposal Instructions

- Dispose of the product in accordance with local regulations.
- Do not dispose of the product in regular household waste.
- Contact local waste management authorities for proper disposal methods.

Contact Information for Further Support

For any inquiries or assistance regarding the MICROADJUST BULLET SEATERS, please refer to the manufacturer's contact information provided with the product packaging or visit the manufacturer's website.

Please remember that safety is paramount when using reloading equipment. By following these guidelines and instructions, you can ensure a safe and effective reloading experience with the MICROADJUST BULLET SEATERS.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk