

MICRO-ADJUST BULLET SEATERS - SINCLAIR INTERNATIONAL MICRO-ADJUST BULLET SEATING DIE 30 BENCHREST

[Reloading](#) > [Reloading Dies](#) > [Rifle Dies](#)

We gathered our customers ideas and reloading experience with hand dies, and partnered with the experts who make them, to introduce the new Sinclair/L.E. Wilson Micro-Adjust Bullet Seater. It features easy-adjust seating depth capabilities with a simple turn of the die body. Sinclair/L.E. Wilson Micro-Adjust Bullet Seaters are detent-bearing driven with positive "click" increments of .0005" for fast, accurate bullet seating depth adjustments. Here are the details of construction: Each seater stem is custom fitted to the seater body ensuring close tolerance fit Precision-cut threads allow bullet seating depth adjustment in .0005" increments Graduated scale for repeated use with different bullets and seating depths Micro-Adjust "clicks" via stainless springs and stainless ball bearings Constructed of 416 Stainless Steel with precise, laser-etched adjustment scale Made in the USA by L.E. Wilson with 85 years of inline die experience We feel these dies are the finest available in terms of quality, construction, and performance.



We gathered our customers ideas and reloading experience with hand dies, and partnered with the experts who make them, to introduce the new Sinclair/L.E. Wilson Micro-Adjust Bullet Seater. It features easy-adjust seating depth capabilities with a simple turn of the die body. Sinclair/L.E. Wilson Micro-Adjust Bullet Seaters are detent-bearing driven with positive "click" increments of .0005" for fast, accurate bullet seating depth adjustments. Here are the details of construction: Each seater stem is custom fitted to the seater body ensuring close tolerance fit Precision-cut threads allow bullet seating depth adjustment in .0005" increments Graduated scale for repeated use with different bullets and seating depths Micro-Adjust "clicks" via stainless springs and stainless ball bearings Constructed of 416 Stainless Steel with precise, laser-etched adjustment scale Made in the USA by L.E. Wilson with 85 years of inline die experience We feel these dies are the finest available in terms of quality, construction, and performance. Available in 12 popular cartridge offerings.

Attributes

- Name: [SINCLAIR INTERNATIONAL MICRO-ADJUST BULLET SEATING DIE 30 BENCHREST](#)
- Manufacturer: [SINCLAIR INTERNATIONAL](#)
- Product no.: 749014509
- Mfr. No.: SIN-30BR
- Cartridge: 30 BR (Benchrest) Remington
- Die Style: Bullet Seating Dies
- Delivery weight: 0.181kg
- Shipping height: 38mm
- Shipping width: 46mm
- Shipping length: 147mm

Item details

Made in USA

Table of Contents

- Startpage
- Safety Instruction Guide for MICROADJUST BULLET SEATERS
- About Us

Safety Instruction Guide for MICROADJUST BULLET SEATERS

Introduction

Thank you for choosing the Sinclair International MicroAdjust Bullet Seater. This product is designed to enhance your reloading experience with precision and ease. To ensure your safety and the effective use of this product, please read this safety instruction guide carefully.

General Safety Guidelines

- Always ensure that you are in a safe environment when using reloading equipment.
- Keep the product out of reach of children and vulnerable individuals.
- Use the product only for its intended purpose as described in this guide.
- Regularly inspect the product for any signs of damage or wear.
- If you notice any defects or malfunctions, discontinue use immediately and seek assistance.
- Follow all local laws and regulations regarding ammunition reloading and usage.

Specific Safety Precautions for Use

- When adjusting the seating depth, ensure that the die is securely fastened to prevent accidental movement.
- Always wear appropriate safety gear, such as safety glasses, when operating reloading equipment.
- Do not exceed recommended adjustments; minor changes can lead to significant variations in bullet seating depth.
- Avoid distractions while using the product to maintain focus and precision.
- Ensure that your workspace is clean and organized to prevent accidents.
- Use caution when handling bullets and other reloading components to avoid injury.

Instructions for Installation and Usage

1. Installation:

- Ensure that your reloading press is properly set up and securely mounted.
- Carefully screw the MicroAdjust Bullet Seater into the reloading press, ensuring a tight fit.
- Check that the seating stem is properly fitted to the seater body.

2. Usage:

- Prepare your brass and bullets according to standard reloading practices.
- Insert a bullet into the case mouth and position it under the die.
- Turn the die body to adjust the seating depth. Each full click represents a change of .0005".
- Use the graduated scale for repeated adjustments with different bullets.
- After achieving the desired seating depth, securely lock the die in place to maintain the setting.

Disposal Instructions

- Dispose of any packaging materials in accordance with local recycling guidelines.
- When the product reaches the end of its life, dispose of it responsibly. Check local regulations for proper disposal methods for metal products.
- Do not dispose of the product in regular household waste.

Contact Information for Further Support

For any inquiries regarding safety, usage, or product support, please refer to the contact information provided by your retailer or visit the manufacturer's website.

By following these guidelines, you can ensure a safe and effective reloading experience with your Sinclair International MicroAdjust Bullet Seater. Thank you for your attention to safety and for choosing our product.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk