

EDGEWOOD DEAD BOTTOM FOR MINIGATER REAR BAG

[Shooting Accessories](#) > [Shooting Rests](#) > [Bench Rest Bags](#)

The Edgewood Dead Bottom works to stabilize the rear bag and provide a "dead" bottom stable bag set up. This also enables the shooter to achieve an additional $\frac{3}{4}$ " to $\frac{7}{8}$ " rear bag height. Each Dead Bottom Bag is manufactured from soft suede leather. Dead Bottom Bags do not come filled.



Attributes

- Name: [EDGEWOOD DEAD BOTTOM FOR MINIGATER REAR BAG](#)
- Manufacturer: [EDGEWOOD SHOOTING BAGS](#)
- Product no.: 749101013
- Mfr. No.: 7544
- Color: Tan
- Material: Leather
- Style: Bag Accessory
- Delivery weight: 0.204kg
- Shipping height: 51mm
- Shipping width: 137mm
- Shipping length: 183mm

Item details

Made in USA

Table of Contents

- Startpage
- Edgewood Dead Bottom Safety Instructions
- About Us

Edgewood Dead Bottom Safety Instructions

Introduction

Thank you for choosing the Edgewood Dead Bottom for your shooting needs. This product is designed to stabilize your rear bag and enhance your shooting experience. To ensure your safety and the proper use of this product, please read and understand the following safety instructions.

General Safety Guidelines

- Always inspect the product before use for any signs of damage or wear.
- Keep the product out of reach of children and vulnerable individuals.
- Use the product only for its intended purpose as described in the instructions.
- Report any unsafe products or accidents to the appropriate authorities.
- Check for recall updates on the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Ensure that the Dead Bottom Bag is placed on a stable surface before use.
- Do not use the bag if it is damaged or shows signs of wear.
- Avoid placing heavy objects on the bag that exceed its intended capacity.
- Use the bag only with compatible shooting equipment to prevent instability.
- Maintain awareness of your surroundings while using the product to avoid accidents.

Instructions for Installation and Usage

1. **Preparation:** Before using the Edgewood Dead Bottom, ensure that you have a clear and stable shooting area.
2. **Placement:**
 - Position the Dead Bottom Bag on a flat surface.
 - Ensure that it is stable and will not tip over during use.
3. **Adjusting Height:**
 - The Dead Bottom allows for an additional height of $\frac{3}{4}$ " to $\frac{7}{8}$ " for your rear bag.
 - Adjust the height as needed but ensure stability is maintained.
4. **Shooting:**
 - Place your rear bag on top of the Dead Bottom Bag.
 - Ensure that the setup is stable before taking your shot.
5. **PostUse:**
 - After shooting, remove the rear bag and store the Dead Bottom in a safe place.
 - Always check the bag for any signs of damage after use.

Disposal Instructions

- Dispose of the product in accordance with local regulations.
- Do not dispose of the product in regular household waste if it contains any hazardous materials.
- Contact your local waste management authority for specific disposal instructions related to leather products.

Contact Information for Further Support

For any questions or concerns regarding the Edgewood Dead Bottom, please refer to the product packaging or visit the manufacturer's website for additional support and resources.

By following these safety instructions, you can ensure a safe and enjoyable shooting experience with your

Edgewood Dead Bottom. Thank you for your attention to safety!

About Us

Brownells Austria

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.at