

KIT SPARE PARTS FOR SEMI AUTO - BERETTA USA KIT SPARE PARTS FOR SEMI AUTO

[Gunsmith Tools](#) > [General Gunsmith Tools](#) > [Field Repair Kits](#)

FITS: A303

Beretta factory spare parts kit for the A300, A301, A302, A303, A390, AL390 and AL391. Parts included are: C52928 Ejector Spring Guide C90177 Ejector Spring C97004 Ejector Pin C54499 Ejector C92155 Extractor Pin C90138 Extractor Spring C52238 Extractor C92154 Extractor Pin C56533 Trigger Guard Retaining Pin C58984 Trigger Guard Retaining Pin C50581 Connecting Rod C92094 Trigger Pin C58933 Cocking Handle C54731 Firing Pin C90148 Firing Pin Spring C56426 Firing Pin Retaining Pin C71020 Hammer C50738 Brace Left C50737 Brace Right C50751 A300/A301/A302/A303 Bushing C97019 A300/A301/A302/A303 Elastic Ring C53665 A304/A390 Bushing C53564 A304/A390 Ring C58970 AL391 Bushing C58967 AL391 Ring C58968 AL391 Elastic Ring C79043 Plug with Swivel C90030 Hammer Spring C80675 Hammer Bushing



Attributes

- Name: [BERETTA USA KIT SPARE PARTS FOR SEMI AUTO](#)
- Manufacturer: [BERETTA USA](#)
- Product no.: 913000252
- Mfr. No.: EK39112
- Delivery weight: 0.658kg
- Shipping height: 69mm
- Shipping width: 300mm
- Shipping length: 368mm
- UPC: 082442757025

Table of Contents

- Startpage
- Safety Instruction Guide for KIT SPARE PARTS FOR SEMI AUTO BERETTA USA
- About Us

Safety Instruction Guide for KIT SPARE PARTS FOR SEMI AUTO BERETTA USA

Introduction

Thank you for purchasing the Beretta spare parts kit for your semiautomatic firearm. This guide is designed to provide you with essential safety information and instructions for the proper use, installation, and disposal of the parts included in this kit. Please read this guide carefully to ensure safe handling and operation.

General Safety Guidelines

- Always treat firearms as if they are loaded.
- Keep firearms pointed in a safe direction at all times.
- Store firearms and ammunition securely, out of reach of children and unauthorized users.
- Wear appropriate safety gear, including eye and ear protection, when using firearms.
- Be aware of your surroundings and ensure a clear shooting area.
- Follow all local laws and regulations regarding firearm ownership and use.
- Report any unsafe products or accidents to the relevant authorities.
- Check for recall updates on the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Ensure that the firearm is unloaded before starting any maintenance or installation work.
- Use only the parts specified in this kit for your Beretta model to avoid compatibility issues.
- Inspect all parts for damage or wear before installation; do not use damaged parts.
- Follow the installation instructions carefully to avoid improper assembly.
- If you are unsure about any part of the installation process, seek assistance from a qualified gunsmith.

Instructions for Installation and Usage

1. Preparation

- Ensure you have a clean, welllit workspace.
- Gather all necessary tools as outlined in the installation instructions.

2. Installation Steps

- **Ejector Spring Guide (C52928):**
 - Remove the old ejector spring guide and replace it with the new one.
- **Ejector Spring (C90177):**
 - Install the new ejector spring by following the manufacturer's specifications.
- **Ejector Pin (C97004):**
 - Carefully insert the ejector pin and ensure it is properly seated.
- **Ejector (C54499):**
 - Replace the old ejector with the new one, ensuring it fits snugly.
- **Extractor Pin (C92155):**
 - Install the extractor pin securely.
- **Extractor Spring (C90138):**
 - Replace the extractor spring as per instructions.
- **Extractor (C52238):**
 - Ensure the extractor is properly aligned and secured.
- **Trigger Guard Retaining Pins (C56533, C58984):**
 - Replace both retaining pins as necessary.

- **Connecting Rod (C50581):**
 - Install the connecting rod according to the specifications.
- **Trigger Pin (C92094):**
 - Ensure the trigger pin is properly installed.
- **Cocking Handle (C58933):**
 - Replace the cocking handle as per instructions.
- **Firing Pin (C54731):**
 - Replace the firing pin and ensure it is secured.
- **Firing Pin Spring (C90148):**
 - Install the new firing pin spring carefully.
- **Firing Pin Retaining Pin (C56426):**
 - Ensure the firing pin retaining pin is properly seated.
- **Hammer (C71020):**
 - Install the hammer as per the manufacturer's instructions.
- **Braces (C50738, C50737):**
 - Replace the left and right braces as necessary.
- **Bushings and Rings (C50751, C97019, C53665, C53564, C58970, C58967, C58968):**
 - Ensure all bushings and rings are properly installed and secured.
- **Plug with Swivel (C79043):**
 - Install the plug with swivel securely.
- **Hammer Spring (C90030):**
 - Replace the hammer spring as per instructions.
- **Hammer Bushing (C80675):**
 - Ensure the hammer bushing is properly seated.

3. Final Checks

- After installation, perform a thorough inspection of the firearm to ensure all parts are installed correctly.
- Test the firearm in a safe environment to ensure proper function.

Disposal Instructions

- Dispose of any old or damaged parts in accordance with local regulations.
- Do not throw firearm parts in regular trash; check for local hazardous waste disposal options.
- Ensure that all disposed parts are rendered unusable to prevent misuse.

Contact Information for Further Support

For any questions or concerns regarding the safety and use of this product, please consult your local Beretta dealer or a qualified gunsmith. Always prioritize safety and compliance with local laws when handling firearms.

Thank you for your attention to these safety guidelines. Enjoy your safe shooting experience!

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk