

EJECTOR, 682 LOW/RH SK LARGE FRAME RAW

[Shotgun Parts](#) > [Receiver & Action Parts](#) > [Ejector Parts](#) > [Ejectors](#)

FITS: S682, 20

All ejectors require gunsmith fitting by Beretta qualified gunsmiths, they are not user installed.



Attributes

- Name: [EJECTOR, 682 LOW/RH SK LARGE FRAME RAW](#)
- Manufacturer: [BERETTA USA](#)
- Product no.: 913300623
- Mfr. No.:
- Make: Beretta
- Model: S682,682
- Delivery weight: 0.005kg
- Shipping height: 1mm
- Shipping width: 83mm
- Shipping length: 146mm

Table of Contents

- [Startpage](#)
- [Ejector Safety Instruction Guide](#)
- [About Us](#)

Ejector Safety Instruction Guide

Introduction

Thank you for choosing the EJECTOR, 682 LOW/RH SK LARGE FRAME RAW. This guide provides essential safety instructions to ensure the safe use and proper handling of your ejector. Please read this guide carefully before installation and use.

General Safety Guidelines

- Ensure that all ejectors are fitted by a Beretta qualified gunsmith. They are not designed for user installation.
- Always handle the ejector with care to avoid injury.
- Keep the ejector out of reach of children and vulnerable individuals.
- Regularly inspect the ejector for any signs of wear or damage.
- If you notice any issues, cease use immediately and consult a qualified gunsmith.

Specific Safety Precautions for Use

- Do not attempt to modify or alter the ejector in any way.
- Always wear appropriate safety gear when handling firearms and related components.
- Ensure that the firearm is unloaded before installing or inspecting the ejector.
- Follow all local laws and regulations regarding firearm use and safety.
- Be aware of your surroundings when using the ejector to avoid accidents.

Instructions for Installation and Usage

1. Installation:

- Only a Beretta qualified gunsmith should install the ejector.
- Provide the gunsmith with the necessary details about your firearm model (S682, 682) to ensure proper fitment.

2. Usage:

- Once installed, familiarize yourself with the ejector's function and operation.
- Test the ejector in a safe environment to ensure it operates correctly.
- Always follow the manufacturer's guidelines for the operation of your firearm.

Disposal Instructions

- Dispose of any damaged or nonfunctional ejectors in accordance with local regulations.
- Do not dispose of ejectors in regular household waste. Check with local authorities for proper disposal methods.

Contact Information for Further Support

For any safety inquiries or concerns regarding the ejector, please consult a Beretta qualified gunsmith or refer to the official Beretta support channels.

This guide is designed to ensure your safety and the proper use of the EJECTOR, 682 LOW/RH SK LARGE FRAME RAW. By following these instructions, you can help prevent accidents and ensure a safe experience with your product.

About Us

Brownells Austria

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.at