

1911 AUTO "FACTORY PLUS" MAINSPRING CAPS - MAINSPRING CAP (B)

[Handgun Parts](#) > [Frame Parts](#) > [Mainspring Parts](#) > [Mainspring Caps](#)

Quality Parts Meet Or Exceed Factory Specs

"Just like original" parts for building a 1911 Auto or returning a gun to factory specifications.



Attributes

- Name: [MAINSPRING CAP \(B\)](#)
- Manufacturer: [WILSON COMBAT](#)
- Product no.: 965011161
- Mfr. No.: R16B
- Finish: Blued
- Make: 1911
- Model: Commander, Government
- Delivery weight: 0.005kg
- Shipping width: 83mm
- Shipping length: 146mm
- UPC: 874218003012

Item details

Made in USA

US export classification: 0A501.x

Table of Contents

- Startpage
- Safety Instruction Guide for 1911 AUTO "FACTORY PLUS" MAINSPRING CAPS
- About Us

Safety Instruction Guide for 1911 AUTO "FACTORY PLUS" MAINSPRING CAPS

Introduction

Thank you for choosing the 1911 AUTO "FACTORY PLUS" MAINSPRING CAPS. This guide provides essential safety instructions and guidelines for the proper use and handling of this product. Please read this document carefully to ensure safe and effective use.

General Safety Guidelines

- Ensure that the product is used in accordance with the manufacturer's instructions.
- Always handle firearms and their components with care and respect.
- Store the mainspring caps in a safe, dry place away from children and unauthorized users.
- Inspect the mainspring caps for any signs of damage or wear before use. Do not use damaged parts.
- Follow all local laws and regulations regarding firearms and their components.
- Report any unsafe products or incidents to the appropriate authorities.

Specific Safety Precautions for Use

- Only use the mainspring caps with compatible models of the 1911 Auto, specifically Government and Commander models.
- Ensure that the firearm is unloaded before installing or replacing mainspring caps.
- Wear appropriate safety gear, including eye protection, when working on firearms.
- Do not attempt to modify the mainspring caps or use them in a manner not intended by the manufacturer.
- Keep hands and fingers clear of the working area when installing or removing mainspring caps.

Instructions for Installation and Usage

1. Preparation:

- Ensure the firearm is unloaded and pointed in a safe direction.
- Gather necessary tools and materials for installation.

2. Installation:

- Remove the old mainspring cap if applicable by following the firearm's disassembly instructions.
- Inspect the new mainspring cap for any defects before installation.
- Align the new mainspring cap with the mainspring housing and press it into place.
- Ensure that the cap is securely fitted and does not move or wobble.

3. Usage:

- After installation, perform a function check of the firearm to ensure proper operation.
- If any issues arise during the function check, remove the mainspring cap and inspect for proper installation.

Disposal Instructions

- Dispose of any old or damaged mainspring caps in accordance with local regulations.
- Do not dispose of firearms or their components in regular household waste.
- Contact local waste management authorities for guidance on proper disposal methods.

Contact Information for Further Support

For safety inquiries or additional support, please refer to the manufacturer's contact information provided with your product packaging. Ensure that you have the product details ready for a more efficient response.

By following these safety instructions, you can ensure the safe use of the 1911 AUTO "FACTORY PLUS" MAINSPRING CAPS. Your safety and the safety of others depend on responsible handling and adherence to these guidelines.

About Us

Brownells Austria

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.at