

1911 AUTO "FACTORY PLUS" MAINSPRING CAPS - MAINSPRING CAP (S)

[Handgun Parts](#) > [Frame Parts](#) > [Mainspring Parts](#) > [Mainspring Caps](#)

Quality Parts Meet Or Exceed Factory Specs

"Just like original" parts for building a 1911 Auto or returning a gun to factory specifications.



Attributes

- Name: [MAINSPRING CAP \(S\)](#)
- Manufacturer: [WILSON COMBAT](#)
- Product no.: 965011162
- Mfr. No.: R16BS
- Finish: Stainless Steel
- Make: 1911
- Model: Government, Commander
- Delivery weight: 0.005kg
- Shipping width: 83mm
- Shipping length: 146mm
- UPC: 874218003029

Item details

Made in USA

US export classification: 0A501.x

Table of Contents

- Startpage
- Consumer Safety Instruction Guide for 1911 AUTO "FACTORY PLUS" MAINSPRING CAPS
- About Us

Consumer Safety Instruction Guide for 1911 AUTO "FACTORY PLUS" MAINSPRING CAPS

Introduction

Thank you for choosing the 1911 AUTO "FACTORY PLUS" MAINSPRING CAPS. This guide provides essential safety information and instructions to ensure the safe use and handling of this product. Please read this guide carefully before using the mainspring caps.

General Safety Guidelines

- Ensure safe use of the product by following all safety instructions.
- Be aware of potential hazards associated with the use of firearms and related components.
- Always treat all firearms as if they are loaded.
- Store all firearms and components in a secure location, out of reach of children and unauthorized users.
- Regularly check for product recalls and safety updates through official channels.

Specific Safety Precautions for Use

- Always wear appropriate safety gear, such as eye protection, when handling firearms.
- Do not use the mainspring caps if they are damaged or show signs of wear.
- Ensure that the firearm is unloaded before installing or replacing any components.
- Follow the manufacturer's instructions for installation and usage to avoid accidents.
- Keep your hands and other body parts clear of moving parts during installation.

Instructions for Installation and Usage

1. Preparation

- Make sure the firearm is unloaded and pointed in a safe direction.
- Gather all necessary tools for installation.

2. Installation of Mainspring Caps

- Remove the existing mainspring cap by carefully following the manufacturer's instructions.
- Inspect the area for any debris or damage before installation.
- Align the new mainspring cap with the mainspring housing and press it into place until it is securely fitted.
- Ensure that the cap is seated properly and does not move when pulled gently.

3. Testing

- After installation, conduct a function check of the firearm to ensure proper operation.
- If the firearm does not function correctly, recheck the installation of the mainspring cap.

4. Usage

- Use the firearm only in accordance with local laws and regulations.
- Regularly maintain your firearm and inspect all components, including mainspring caps, for signs of wear or damage.

Disposal Instructions

- Dispose of any damaged or unused mainspring caps in accordance with local regulations.
- Do not throw away components in regular household waste. Instead, consult local authorities for proper disposal methods.

Contact Information for Further Support

For any questions or concerns regarding the 1911 AUTO "FACTORY PLUS" MAINSPRING CAPS, please refer to the manufacturer's support resources. Ensure that you have the product information ready for assistance.

Thank you for your attention to these safety instructions. By following these guidelines, you can help ensure a safe and enjoyable experience with your firearm.

About Us

Brownells Austria

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.at