

1911 AUTO "FACTORY PLUS" MAINSPRING CAPS - MAINSPRING CAP PIN (B)

[Handgun Parts](#) > [Frame Parts](#) > [Mainspring Parts](#) > [Mainspring Caps](#)

Quality Parts Meet Or Exceed Factory Specs

"Just like original" parts for building a 1911 Auto or returning a gun to factory specifications.



Attributes

- Name: [MAINSPRING CAP PIN \(B\)](#)
- Manufacturer: [WILSON COMBAT](#)
- Product no.: 965011165
- Mfr. No.:
- Finish: Blued
- Make: 1911
- Model: Commander, Government
- Delivery weight: 0.005kg
- Shipping width: 83mm
- Shipping length: 146mm
- UPC: 874218003050

Item details

Made in USA

US export classification: 0A501.x

Table of Contents

- Startpage
- Safety Instruction Guide for 1911 AUTO "FACTORY PLUS" MAINSPRING CAPS MAINSPRING CAP PIN (B)
- About Us

Safety Instruction Guide for 1911 AUTO "FACTORY PLUS" MAINSPRING CAPS MAINSPRING CAP PIN (B)

Introduction

Thank you for choosing the 1911 AUTO "FACTORY PLUS" MAINSPRING CAPS MAINSPRING CAP PIN (B). This product is designed to meet the highest safety standards and ensure a reliable performance for your 1911 Auto firearm. Please read this safety instruction guide carefully to ensure safe usage and compliance with the EU General Product Safety Regulation (GPSR).

General Safety Guidelines

- Ensure that all components are compatible with your specific 1911 Auto model (Government or Commander).
- Always handle firearms with care and follow all safety protocols.
- Store all parts in a dry and secure location, away from children and unauthorized users.
- Regularly inspect parts for wear or damage before installation or use.
- Report any unsafe products or accidents to the appropriate authorities.

Specific Safety Precautions for Use

- Always wear appropriate safety gear, including eye protection, when working with firearms.
- Keep your workspace clean and organized to avoid accidents.
- Use only tools that are in good condition and appropriate for the installation of the mainspring caps.
- Avoid using excessive force during installation to prevent damage to the parts.
- Ensure that the firearm is unloaded before beginning any installation or maintenance work.

Instructions for Installation and Usage

1. Preparation

- Ensure the firearm is completely unloaded and safe to handle.
- Gather all necessary tools and components for installation.

2. Installation Steps

- Remove the old mainspring cap if applicable.
- Align the new mainspring cap pin (B) with the designated holes in the mainspring housing.
- Insert the mainspring cap pin (B) carefully, ensuring it fits snugly.
- Check that the mainspring cap is secure and properly seated.

3. PostInstallation Checks

- Inspect the installation to ensure no parts are loose or misaligned.
- Conduct a function check of the firearm to ensure it operates correctly.
- Store the firearm safely until it is ready for use.

Disposal Instructions

- Dispose of any old or damaged parts in accordance with local regulations.
- Do not dispose of firearms or firearm components in regular household waste.

- Consider recycling metal components when possible.

Contact Information for Further Support

For any questions or concerns regarding the 1911 AUTO "FACTORY PLUS" MAINSPRING CAPS MAINSPRING CAP PIN (B), please reach out to your local dealer or manufacturer for support. They can provide guidance on installation, usage, and safety.

Thank you for your attention to these safety instructions. Your adherence to these guidelines will help ensure a safe and enjoyable experience with your firearm.

About Us

Brownells Austria

Brownells - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

www.brownells.at