

1911 AUTO "FACTORY PLUS" MAINSPRING CAPS - WILSON COMBAT MAINSPRING CAP PIN (S)

[Handgun Parts](#) > [Frame Parts](#) > [Mainspring Parts](#) > [Mainspring Caps](#)

Quality Parts Meet Or Exceed Factory Specs

"Just like original" parts for building a 1911 Auto or returning a gun to factory specifications.



Attributes

- Name: [WILSON COMBAT MAINSPRING CAP PIN \(S\)](#)
- Manufacturer: [WILSON COMBAT](#)
- Product no.: 965011166
- Mfr. No.: R16DS
- Finish: Stainless Steel
- Model: Commander, Government
- Weapon type: 1911
- Delivery weight: 0.005kg
- Shipping width: 83mm
- Shipping length: 146mm
- UPC: 874218003067

Item details

Made in USA

US export classification: 0A501.x

Table of Contents

- Startpage
- Safety Instruction Guide for 1911 AUTO "FACTORY PLUS" MAINSPRING CAPS WILSON COMBAT MAINSPRING CAP PIN (S)
- About Us

Safety Instruction Guide for 1911 AUTO "FACTORY PLUS" MAINSPRING CAPS WILSON COMBAT MAINSPRING CAP PIN (S)

Introduction

Thank you for choosing the 1911 AUTO "FACTORY PLUS" MAINSPRING CAPS. This product is designed to help you build a 1911 Auto or restore your firearm to factory specifications. To ensure safe and effective use, please read this guide thoroughly before installation and usage.

General Safety Guidelines

- Ensure that all components are compatible with your specific 1911 Auto model.
- Always handle firearms with care and follow all local laws and regulations regarding firearm use.
- Store all firearm parts, including mainspring caps, in a secure location out of reach of children and unauthorized users.
- Regularly inspect all firearm components for signs of wear or damage before use.

Specific Safety Precautions for Use

- Do not attempt to install or use these mainspring caps if you are unfamiliar with firearm assembly or disassembly.
- Always use personal protective equipment (PPE) such as safety glasses and gloves during installation.
- Ensure that the firearm is unloaded and pointed in a safe direction before beginning any work.
- Be aware of potential hazards such as sharp edges or small parts that may pose a choking hazard.

Instructions for Installation and Usage

1. Preparation

- Gather all necessary tools, including a screwdriver and any specific tools required for your 1911 Auto model.
- Ensure your workspace is clean and free from distractions.

2. Installation

- Confirm that your firearm is unloaded. Check the magazine and chamber to ensure no ammunition is present.
- Remove the existing mainspring cap by following the manufacturer's guidelines for disassembly.
- Carefully install the new mainspring cap, ensuring it is seated properly. Refer to your firearm's manual for specific installation instructions.

3. PostInstallation Check

- After installation, doublecheck that all parts are secure and functioning correctly.
- Perform a function check of the firearm to ensure safe operation.

4. Usage

- Follow all safety protocols when operating your firearm.
- Regularly maintain and inspect the mainspring cap and other components for wear.

Disposal Instructions

- Dispose of any old or damaged parts in accordance with local regulations.
- Do not throw firearm components in regular trash; instead, consider recycling or taking them to a local hazardous waste facility.

Contact Information for Further Support

For any safety inquiries or concerns regarding the 1911 AUTO "FACTORY PLUS" MAINSPRING CAPS, please consult your local firearms dealer or manufacturer for guidance.

By following these safety instructions, you can ensure a safe and effective experience with your 1911 AUTO "FACTORY PLUS" MAINSPRING CAPS. Thank you for your attention to safety.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk