

1911 AUTO "FACTORY PLUS" MAINSPRING PINS - WILSON COMBAT MAINSPRING HOUSING PIN (S)

[Handgun Parts](#) > [Frame Parts](#) > [Mainspring Parts](#) > [Mainspring Pins](#)

"Just like original" parts for building a 1911 Auto or returning a gun to factory specifications.



Attributes

- Name: [WILSON COMBAT MAINSPRING HOUSING PIN \(S\)](#)
- Manufacturer: [WILSON COMBAT](#)
- Product no.: 965011171
- Mfr. No.: R17S
- Model: Commander, Government, Officers
- Weapon type: 1911
- Delivery weight: 0.005kg
- Shipping width: 83mm
- Shipping length: 146mm
- UPC: 874218003081

Item details

Made in USA

Table of Contents

- [Startpage](#)
- [Safety Instruction Guide for 1911 AUTO "FACTORY PLUS" MAINSPRING PINS](#)
- [About Us](#)

Safety Instruction Guide for 1911 AUTO "FACTORY PLUS" MAINSPRING PINS

Introduction

Thank you for choosing the 1911 AUTO "FACTORY PLUS" Mainspring Pins from Wilson Combat. This guide provides essential safety instructions to ensure the safe handling, installation, and use of this product. Please read this guide carefully before using the product to avoid any hazards.

General Safety Guidelines

- Ensure that all users of this product are familiar with safe firearm handling practices.
- Always keep firearms unloaded when not in use.
- Store the mainspring pins and any firearm components in a secure location, out of reach of children and unauthorized users.
- Regularly inspect your firearm for any signs of wear or damage, especially after installation of new parts.
- Follow all local laws and regulations regarding firearms and their components.

Specific Safety Precautions for Use

- Only use these mainspring pins with compatible 1911 models: Government, Commander, and Officers.
- Ensure the firearm is completely disassembled and unloaded before attempting to install or replace any parts.
- Use appropriate tools and wear safety goggles when handling small parts to prevent injury.
- Do not attempt to modify the mainspring pins or any firearm components beyond their intended use.
- If you are unsure about the installation process, seek assistance from a qualified gunsmith.

Instructions for Installation and Usage

1. Preparation:

- Gather all necessary tools, including a punch tool, hammer, and safety goggles.
- Ensure you are working in a clean, welllit area.

2. Disassembly of the Firearm:

- Remove the magazine and ensure the firearm is unloaded.
- Follow the manufacturer's disassembly instructions to safely take apart your 1911 Auto.

3. Installation of Mainspring Pins:

- Locate the mainspring housing in your firearm.
- Carefully remove the old mainspring pins using the punch tool.
- Align the new mainspring pins with the housing and gently tap them into place using the hammer.
- Ensure that the pins are securely fitted and do not protrude excessively.

4. Reassembly:

- Follow the manufacturer's reassembly instructions to put your firearm back together.
- Check that all parts are functioning correctly before using the firearm.

5. Testing:

- Conduct a function check to ensure that the firearm operates safely and correctly after installation.

- If any issues arise, consult a qualified gunsmith.

Disposal Instructions

- Dispose of any old or damaged parts in accordance with local regulations regarding hazardous materials.
- Ensure that all components are securely packaged to prevent accidental injury during disposal.

Contact Information for Further Support

For any questions or concerns regarding the installation or safety of the 1911 AUTO "FACTORY PLUS" Mainspring Pins, please consult a qualified gunsmith or contact the manufacturer directly for assistance.

By following these safety instructions, you help ensure a safe experience while using your 1911 AUTO "FACTORY PLUS" Mainspring Pins. Thank you for your attention to safety.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk