

Clay Launcher

[Shooting Accessories](#) > [Targets & Accessories](#) > [Throwers](#)

The Caldwell® Clay Launcher is designed to provide hours of shooting entertainment. The one-piece design is simple to use and makes it easy for anyone to throw clay birds. Simply insert the clay target and fling it to send the target sailing. Durable molded plastic construction.

NO IMAGE
AVAILABLE

Attributes

- Name: [Clay Launcher](#)
- Manufacturer: [Caldwell](#)
- Product no.: EU1000214
- Mfr. No.: 505501
- Colour: Green
- Delivery weight: 0.14kg
- Shipping height: 157mm
- Shipping width: 25mm
- Shipping length: 485mm
- UPC: 661120055013

Table of Contents

- Startpage
- Caldwell Clay Launcher Safety Instructions
- About Us

Caldwell Clay Launcher Safety Instructions

Introduction

Thank you for choosing the Caldwell® Clay Launcher. This guide provides essential safety instructions to ensure safe and enjoyable use of your new clay launcher. Please read all instructions carefully before use.

General Safety Guidelines

- Always follow local laws and regulations regarding the use of clay launchers and shooting sports.
- Ensure that the shooting area is safe and free from obstructions, people, and animals.
- Always wear appropriate eye and ear protection when using the clay launcher.
- Keep the clay launcher out of reach of children and unauthorized users.
- Inspect the clay launcher before each use to ensure it is in good condition.
- Do not modify or alter the clay launcher in any way.

Specific Safety Precautions for Use

- Use only approved clay targets with the launcher.
- Stand at a safe distance from the launch area when using the clay launcher.
- Ensure that the area behind the target is clear of any obstacles or bystanders.
- Do not attempt to catch or retrieve launched clay targets while they are in the air.
- Always use the launcher with both hands for better control.
- Do not use the clay launcher if you are under the influence of drugs or alcohol.

Instructions for Installation and Usage

1. Installation:

- Remove the clay launcher from the packaging.
- Ensure that all parts are present and in good condition.
- No assembly is required; the onepiece design is ready for use.

2. Usage:

- Insert a clay target into the designated slot of the launcher.
- Grip the launcher firmly with both hands.
- Aim the launcher in a safe direction towards the intended launch area.
- With a swift motion, fling the launcher to send the clay target sailing into the air.
- After launching, ensure that the area is clear before retrieving any fallen targets.

Disposal Instructions

- Dispose of the clay launcher responsibly at the end of its life cycle.
- Check local regulations for proper disposal methods of plastic products.
- Do not dispose of the launcher in regular household waste if it can be recycled.

Contact Information for Further Support

For any safety inquiries or concerns regarding the Caldwell Clay Launcher, please refer to the manufacturer's official website or customer service resources.

By following these safety instructions, you can ensure a safe and enjoyable experience with your Caldwell Clay Launcher. Remember to always prioritize safety and adhere to local laws and regulations. Happy shooting!

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk