

Clay Launcher - Clay Launcher Doubles Thrower

[Shooting Accessories](#) > [Targets & Accessories](#) > [Throwers](#)

The Caldwell® Clay Launcher is designed to provide hours of shooting entertainment. The one-piece design is simple to use and makes it easy for anyone to throw clay birds. Simply insert the clay target and fling it to send the target sailing. Durable molded plastic construction.

NO IMAGE
AVAILABLE

Attributes

- Name: [Clay Launcher Doubles Thrower](#)
- Manufacturer: [Caldwell](#)
- Product no.: EU1000215
- Mfr. No.: 505502
- Colour: Green/Black
- Delivery weight: 0.45kg
- Shipping height: 264mm
- Shipping width: 57mm
- Shipping length: 775mm
- UPC: 661120055020

Table of Contents

- Startpage
- Caldwell Clay Launcher Safety Instruction Guide
- About Us

Caldwell Clay Launcher Safety Instruction Guide

Introduction

Thank you for choosing the Caldwell® Clay Launcher. This product is designed to enhance your shooting experience by providing hours of entertainment. To ensure safe and effective use, please read and follow these safety instructions carefully.

General Safety Guidelines

- Always supervise the use of the Caldwell Clay Launcher, especially if children are present.
- Ensure that all users are familiar with the operation of the launcher before use.
- Inspect the product for any damage or wear before each use. Do not use if damaged.
- Always use clay targets that are compatible with the Caldwell Clay Launcher.
- Ensure that the area around the launcher is clear of obstructions and bystanders before using.
- Follow all local laws and regulations regarding the use of clay launchers.

Specific Safety Precautions for Use

- Do not aim the launcher at anyone or anything other than the intended target area.
- Always maintain a safe distance from the launcher when it is in use.
- Wear appropriate eye protection when using the launcher.
- Do not attempt to modify or repair the launcher. Any alterations may compromise safety.
- If the launcher fails to operate as intended, cease use immediately and inspect for issues.

Instructions for Installation and Usage

1. Setup:

- Place the Caldwell Clay Launcher on a stable, flat surface away from people and obstacles.
- Ensure that the launcher is securely positioned before inserting clay targets.

2. Loading:

- Insert a clay target into the designated holder of the launcher.
- Ensure that the target is properly seated and stable before proceeding.

3. Launching:

- Stand behind the launcher and ensure that all bystanders are at a safe distance.
- Grip the launcher firmly and use a quick, controlled motion to fling the target into the air.
- Observe the flight path of the target and be prepared for followup shots.

4. PostUse:

- After use, remove any remaining clay targets from the launcher.
- Clean the launcher as needed to maintain its condition.

Disposal Instructions

- When the Caldwell Clay Launcher reaches the end of its life or is no longer usable, dispose of it in accordance with local regulations.
- Do not dispose of the product in household waste. Check for recycling options in your area.

Contact Information for Further Support

For any questions or concerns regarding the Caldwell Clay Launcher, please refer to the manufacturer's website or contact your local retailer for assistance. Remember to report any unsafe products or accidents to the appropriate authorities and check for recall updates on the EU's Safety Gate platform.

Thank you for your attention to these safety instructions. Enjoy your shooting experience with the Caldwell Clay Launcher!

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk