

# Clandestine 18MP Invisible Flash Game Camera

[Shooting Accessories](#) > [Range Gear](#) > [Cameras](#)

The BOG Clandestine™ camera features lightning fast sub ¼ second trigger speeds, HD video, environmental image stamping, best in class flash range and 3" viewing screen.

NO IMAGE  
AVAILABLE

## Attributes

- Name: [BOG Clandestine 18MP Invisible Flash Game Camera](#)
- Manufacturer: [BOG](#)
- Product no.: EU1001658
- Mfr. No.: 1116327
- Delivery weight: 0.82kg
- Shipping height: 178mm
- Shipping width: 102mm
- Shipping length: 140mm
- UPC: 661120080152

# Table of Contents

- Startpage
- BOG Clandestine 18MP Invisible Flash Game Camera Safety Instructions
- About Us

# BOG Clandestine 18MP Invisible Flash Game Camera Safety Instructions

## Introduction

Thank you for choosing the BOG Clandestine 18MP Invisible Flash Game Camera. This guide provides important safety information to ensure the safe and effective use of your camera. Please read and follow all instructions carefully.

## General Safety Guidelines

- Ensure that the camera is used in accordance with the manufacturer's instructions to prevent accidents and injuries.
- Keep the camera out of reach of children and vulnerable individuals to avoid misuse.
- Regularly check for any signs of damage or malfunction before use.
- Report any unsafe products or accidents to the appropriate authorities.
- Stay informed about recall updates via the EU's Safety Gate platform.

## Specific Safety Precautions for Use

### • Electrical Safety:

- Do not expose the camera to moisture or water to prevent electrical shock or damage.
- Use only the recommended power sources and batteries as specified in the product manual.

### • Environmental Safety:

- Avoid placing the camera in areas with extreme temperatures or direct sunlight for prolonged periods.
- Ensure that the camera is securely mounted to prevent it from falling or being damaged.

### • Operational Safety:

- Do not attempt to disassemble or repair the camera yourself. Seek professional assistance for repairs.
- Be aware of your surroundings and ensure that the camera is positioned safely to avoid accidents during operation.

## Instructions for Installation and Usage

### • Installation:

1. Choose a suitable location for the camera, ensuring it is stable and secure.
2. Mount the camera at the desired height and angle, following the manufacturer's guidelines.
3. Ensure that the camera is not obstructed by branches, foliage, or other objects that may block the lens.

### • Usage:

1. Power on the camera using the appropriate method as outlined in the manual.
2. Set the desired settings for photo and video capture, including trigger speed and flash options.
3. Regularly check the camera's functionality and battery status to ensure optimal performance.

- **Maintenance:**

- Clean the camera lens and housing with a soft, dry cloth to maintain image quality.
- Store the camera in a dry, cool place when not in use to prolong its lifespan.

## Disposal Instructions

- Dispose of the camera and its components in accordance with local regulations regarding electronic waste.
- Remove batteries and dispose of them separately, following the guidelines for battery disposal in your area.

## Contact Information for Further Support

For any questions or concerns regarding the BOG Clandestine 18MP Invisible Flash Game Camera, please refer to the manufacturer's contact information provided in the product documentation. Ensure you have the product details ready when seeking assistance.

By following these safety instructions, you can ensure a safe and enjoyable experience with your BOG Clandestine camera. Thank you for your attention to safety!

# About Us

## Brownells UK

### **Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories**

Unit 1, Laughing Dog Industrial Estate  
London Road  
Rugby  
Warwickshire  
CV23 9LP

[www.brownells.co.uk](http://www.brownells.co.uk)