

SEATERHEADS - TRIEBEL Seaterhead - Caliber 8,5/.338 - Type: R80

[Reloading](#) > [Reloading Dies](#) > [Neck Size Bushings](#)

Accessory for Seater with Crimp and Bench-Rest-Seaters from Triebel.

You will find further informations in the manual.

[The manual can be found here](#)

NO IMAGE
AVAILABLE

Attributes

- Name: [TRIEBEL Seaterhead - Caliber 8,5/.338 - Type: R80](#)
- Manufacturer: [TRIEBEL](#)
- Product no.: EU2008367
- Mfr. No.: 3000167
- Diameter (in): 0.338
- Delivery weight: 0.015kg
- Shipping height: 15mm
- Shipping width: 15mm
- Shipping length: 30mm

Table of Contents

- [Startpage](#)
- [TRIEBEL Seaterhead Safety Instruction Guide](#)
- [About Us](#)

TRIEBEL Seaterhead Safety Instruction Guide

Introduction

Thank you for choosing the TRIEBEL Seaterhead Caliber 8,5/.338 Type: R80. This product is designed to enhance your reloading experience while ensuring safety and efficiency. Please read this safety instruction guide carefully to understand how to use your Seaterhead safely and effectively.

General Safety Guidelines

- Always use the Seaterhead in accordance with the manufacturer's instructions.
- Inspect the product for any damage before use. Do not use if damaged.
- Keep the Seaterhead and all reloading components out of reach of children and unauthorized persons.
- Ensure that your workspace is clean and organized to prevent accidents.
- Wear appropriate safety gear, including safety glasses and gloves, when using reloading equipment.
- Be aware of your surroundings and ensure that no one is in close proximity while you are working.

Specific Safety Precautions for Use

- Use only with compatible crimp and benchrestseaters from Triebel.
- Ensure that you are using the correct caliber (8.5/.338) for your Seaterhead.
- Do not modify the Seaterhead in any way, as this can lead to unsafe conditions.
- Always follow the recommended torque settings when installing the Seaterhead onto your reloading press.
- Be cautious of sharp edges on the Seaterhead and other reloading tools.
- Avoid distractions while using the Seaterhead to maintain focus on the task at hand.

Instructions for Installation and Usage

1. Installation:

- Ensure that your reloading press is turned off and unplugged before installation.
- Remove any existing components from the press that may interfere with the installation of the Seaterhead.
- Align the Seaterhead with the press and secure it using the appropriate screws and tools as per the manufacturer's specifications.
- Verify that the Seaterhead is tightly secured and does not wobble.

2. Usage:

- Prepare your reloading materials according to the manufacturer's guidelines.
- Set the desired seating depth as per your reloading specifications.
- Carefully insert the cartridge case into the Seaterhead.
- Activate the press to seat the bullet, ensuring that you maintain a steady and controlled motion.
- After use, clean the Seaterhead to remove any residue or debris.

Disposal Instructions

- Dispose of any packaging materials in accordance with local regulations.
- When the Seaterhead has reached the end of its life cycle, dispose of it responsibly. Check with local waste management authorities for guidance on disposal of metal and plastic components.

Contact Information for Further Support

For any inquiries or further assistance regarding the TRIEBEL Seaterhead, please consult the product manual or contact your local retailer.

Please remember to report any unsafe products or accidents to the appropriate authorities. Regularly check for recall updates on the EU's Safety Gate platform to stay informed about product safety. Thank you for prioritizing safety while using your TRIEBEL Seaterhead.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk