

Chronographs Replacement Parts - Sporter Replacement Display

[Shooting Accessories](#) > [Range Gear](#) > [Chronographs](#)

This replacement display is specifically designed for the MagnetoSpeed Sporter unit. It is compatible with all MagnetoSpeed chronograph bayonets, though it may not provide full functionality when used with V-series displays.

NO IMAGE
AVAILABLE

Attributes

- Name: [Sporter Replacement Display](#)
- Manufacturer: [MAGNETOSPEED](#)
- Product no.: EU2016410
- Mfr. No.: SP_A1_02
- Delivery weight: 1kg
- Shipping height: 100mm
- Shipping width: 100mm
- Shipping length: 100mm

Table of Contents

- Startpage
- Chronographs Replacement Parts Sporter Replacement Display Safety Instructions
- About Us

Chronographs Replacement Parts Sporter Replacement Display Safety Instructions

Introduction

Thank you for choosing the Chronographs Replacement Parts Sporter Replacement Display. This product is designed specifically for the MagnetoSpeed Sporter unit. Please read this safety instruction guide carefully to ensure safe usage and compliance with the EU General Product Safety Regulation (GPSR).

General Safety Guidelines

- Always ensure the product is used as intended and according to the manufacturer's instructions.
- Inspect the display for any visible damage before use. Do not use if damaged.
- Keep the display out of reach of children and vulnerable individuals.
- Be aware of potential hazards associated with electronic devices, including electrical shock and malfunction.
- Report any unsafe product incidents to the appropriate authorities.
- Regularly check for updates regarding product recalls on the EU's Safety Gate platform.

Specific Safety Precautions for Use

- Ensure that the replacement display is compatible with your MagnetoSpeed Sporter unit.
- Avoid using the display with Vseries displays as it may not provide full functionality.
- Do not expose the display to extreme temperatures, humidity, or moisture.
- Handle the display with care to avoid dropping or damaging it.
- Use only recommended accessories and components with the display.

Instructions for Installation and Usage

1. Installation:

- Ensure the MagnetoSpeed Sporter unit is powered off before installation.
- Carefully remove the existing display from the unit if applicable.
- Align the replacement display with the bayonet of the MagnetoSpeed Sporter unit.
- Press gently until the display is securely attached.
- Ensure all connections are tight and there are no gaps.

2. Usage:

- Power on the MagnetoSpeed Sporter unit after installation.
- Follow the user manual of the MagnetoSpeed Sporter for operating instructions.
- Regularly check the display for any signs of malfunction or damage during use.
- If the display shows any irregularities, power off the unit and inspect the display.

Disposal Instructions

- Dispose of the replacement display according to local electronic waste regulations.
- Do not dispose of the display in regular household waste.
- Check with local authorities for designated electronic waste disposal sites.

Contact Information for Further Support

For any questions or concerns regarding the Chronographs Replacement Parts Sporter Replacement Display, please consult the manufacturer's website or contact their customer support. Ensure to have your product details ready for assistance.

Thank you for your attention to these safety instructions. Your safety is our priority.

About Us

Brownells UK

Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories

Unit 1, Laughing Dog Industrial Estate
London Road
Rugby
Warwickshire
CV23 9LP

www.brownells.co.uk