


# **CZ P10C, P10F VORTEX VIPER/VENOM SIGHT MOUNT - EGW SIGHT MOUNT FOR VORTEX VIPER/VENOM FITS CZ P10C/P10F BLACK**

[Optics & Mounting](#) > [Rings, Mounts & Bases](#) > [Handgun Bases](#)

EGW red dot sights are meant to be installed from the left to the right (with the muzzle facing forward). The dovetail has a progressive taper to allow for easier install. Simply remove the rear sight on your gun and replace it with EGW mount in order to mount your Vortex Viper/Venom, Burris FastFire, or Docter red-dot sight. You can take the mount off and replace your rear sight at any time. Mounting hardware included. Installation Instructions Remove the rear sight\* Install the EGW Sight Mount in the dovetail Tighten set screw (if applicable) Place the red dot sight on the EGW Sight Mount (placing a small piece of paper between the red dot sight and the sight mount will make for easier removal and will keep Loctite off of the red dot sight.) Apply blue Loctite to the provided mounting screws Torque mounting screws to 15in/lbs 2 Button Head Cap Screws - Provided for Vortex Viper and Venom Sights 2 Flat Head Cap Screws - Provided for Burris FastFire and Docter Sights The screws that are included with this mount require a 5/64" allen wrench for installation. Modification of your firearm may nullify the manufacturer's warranty. This product should be installed and checked by a qualified gunsmith. No liability is expressed or implied for damage or injury which may result from improper installation or use of this product. This Mount Does Not Fit: CZ P10C Optics Ready CZ P10F Optics Ready

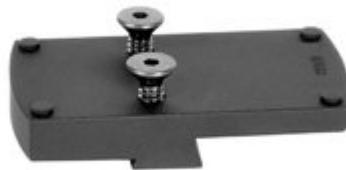

## **Attributes**

- Name: [EGW SIGHT MOUNT FOR VORTEX VIPER/VENOM FITS CZ P10C/P10F BLACK](#)
- Manufacturer: [EGW](#)
- Product no.: 296000675
- Mfr. No.: 49329
- Colour: Black
- Material: Aluminum
- Model: P-10F,P-10C
- Number of Bases: 1-Piece
- Style: Tactical
- Weapon type: CZ
- Delivery weight: 0.045kg
- Shipping height: 25mm
- Shipping width: 76mm
- Shipping length: 140mm
- UPC: 841370116010

## **Item details**

Made in USA

# Table of Contents

- Startpage
- CZ P10C, P10F Vortex Viper/Venom Sight Mount Safety Instructions
- About Us

# CZ P10C, P10F Vortex Viper/Venom Sight Mount Safety Instructions

## Introduction

Thank you for purchasing the CZ P10C, P10F Vortex Viper/Venom Sight Mount by EGW. This guide provides essential safety information, installation instructions, and usage guidelines to ensure safe and effective operation of your sight mount.

## General Safety Guidelines

- Ensure that the product is used only for its intended purpose.
- Always handle firearms responsibly and in compliance with local laws.
- Keep the sight mount and your firearm out of reach of children and unauthorized users.
- Regularly inspect the sight mount for any signs of wear or damage before use.
- If you encounter any issues during installation or use, consult a qualified gunsmith.

## Specific Safety Precautions for Use

- This sight mount is not compatible with CZ P10C Optics Ready or CZ P10F Optics Ready models.
- Modification of your firearm may void the manufacturer's warranty. It is recommended to have the installation performed by a qualified gunsmith.
- The installation process involves handling small parts; ensure a clean and organized workspace to avoid losing components.
- Use caution when applying Loctite to screws to prevent excess from contaminating the red dot sight.

## Instructions for Installation and Usage

### 1. Remove the Rear Sight

- Use appropriate tools to carefully remove the rear sight from your firearm.

### 2. Install the EGW Sight Mount

- Align the EGW Sight Mount in the dovetail from left to right (muzzle facing forward).
- Ensure that the mount fits securely in place.

### 3. Tighten Set Screw

- If applicable, tighten the set screw on the mount to secure it.

### 4. Place the Red Dot Sight

- Position your Vortex Viper/Venom, Burris FastFire, or Docter reddot sight onto the EGW Sight Mount.
- For easier removal, place a small piece of paper between the red dot sight and the mount to prevent Loctite from adhering to the sight.

### 5. Apply Loctite

- Apply blue Loctite to the provided mounting screws to ensure a secure fit.

### 6. Torque Mounting Screws

- Use a torque wrench to tighten the mounting screws to 15 in/lbs.

## 7. Included Hardware

- The following screws are included for your convenience:
  - 2 Button Head Cap Screws for Vortex Viper and Venom Sights
  - 2 Flat Head Cap Screws for Burris FastFire and Docter Sights
- A 5/64" allen wrench is required for installation.

## Disposal Instructions

- Dispose of any packaging materials in accordance with local regulations.
- If the sight mount is no longer functional, dispose of it responsibly, ensuring that it does not pose a risk to the environment or public safety.

## Contact Information for Further Support

For any inquiries or further support related to safety and installation, please consult a qualified gunsmith or an authorized dealer.

By following these guidelines, you can ensure the safe installation and use of your CZ P10C, P10F Vortex Viper/Venom Sight Mount. Always prioritize safety and consult professionals when in doubt.

# About Us

## Brownells UK

### **Brownells UK - World's Largest Supplier of Gun Parts, Gunsmith Tools & Shooting Accessories**

Unit 1, Laughing Dog Industrial Estate  
London Road  
Rugby  
Warwickshire  
CV23 9LP

[www.brownells.co.uk](http://www.brownells.co.uk)